


3 x 4 M

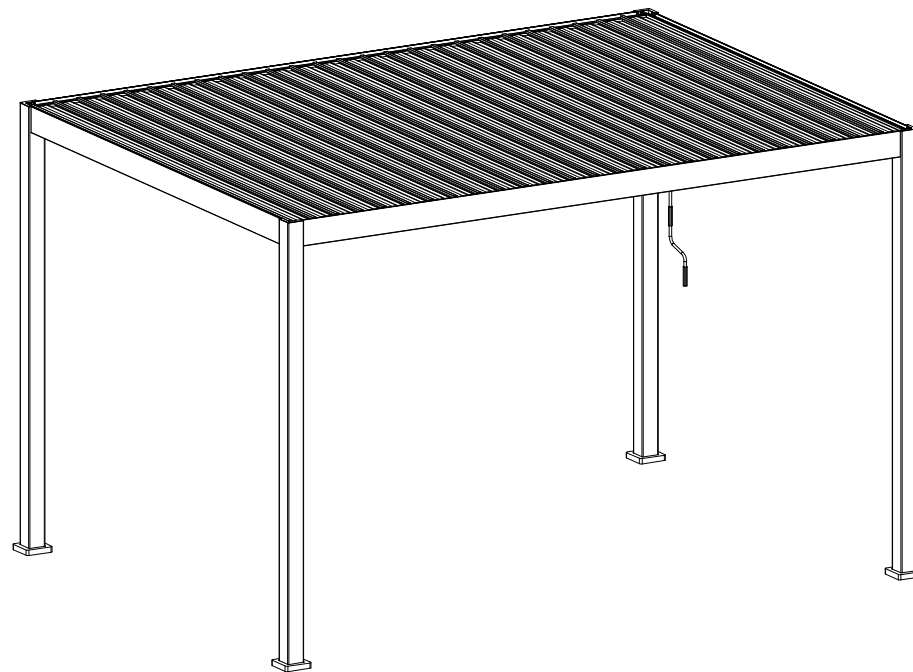





YS5001



At least need 3person work together

REQUIRED TOOLS



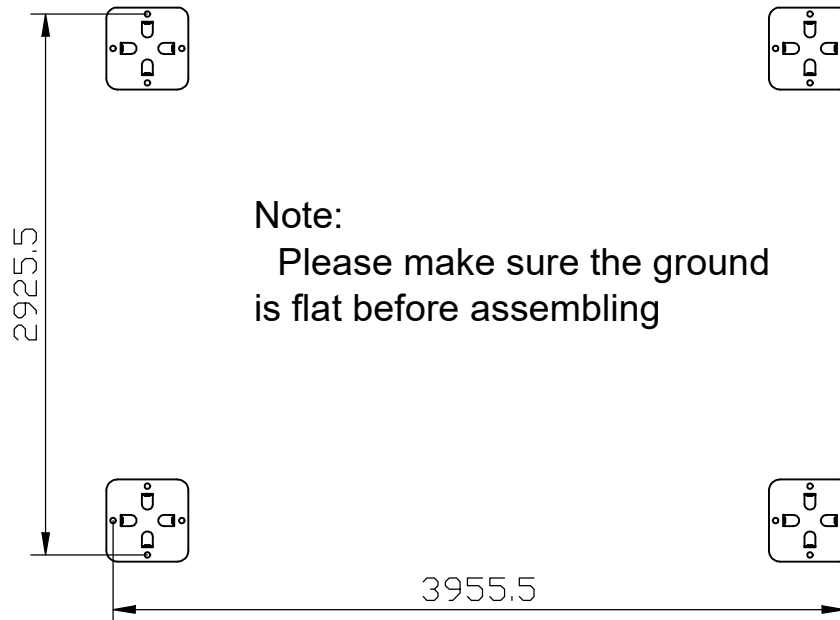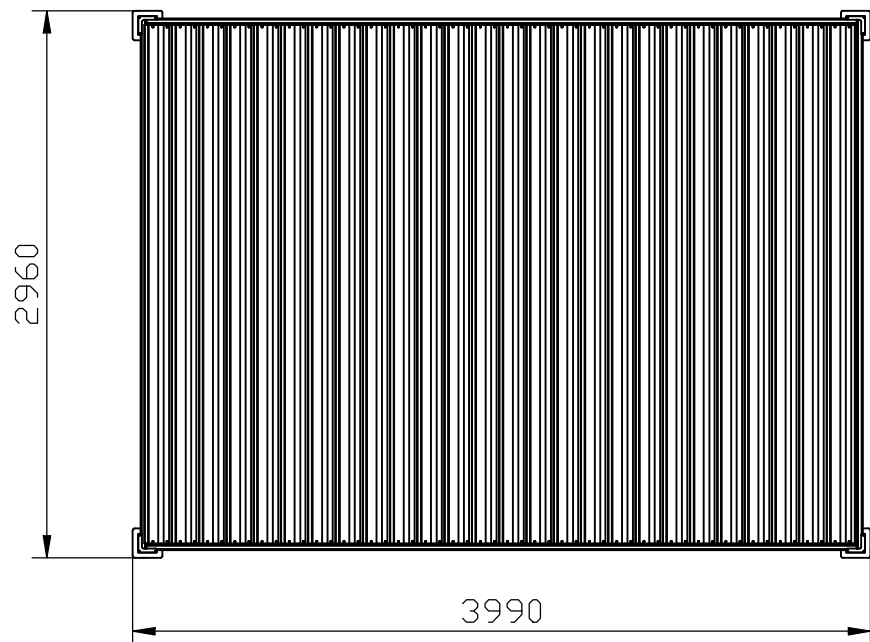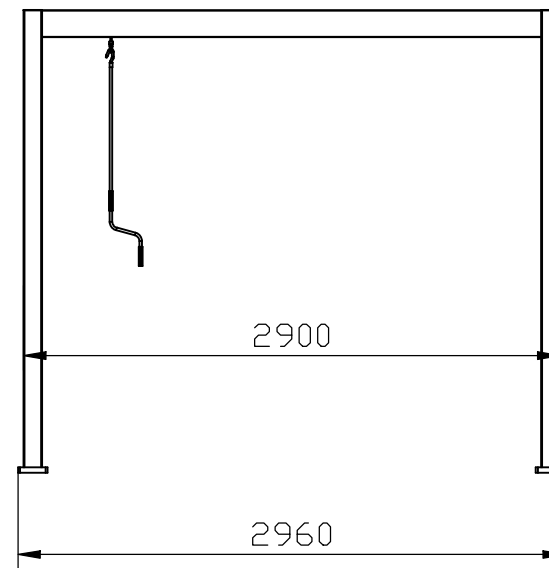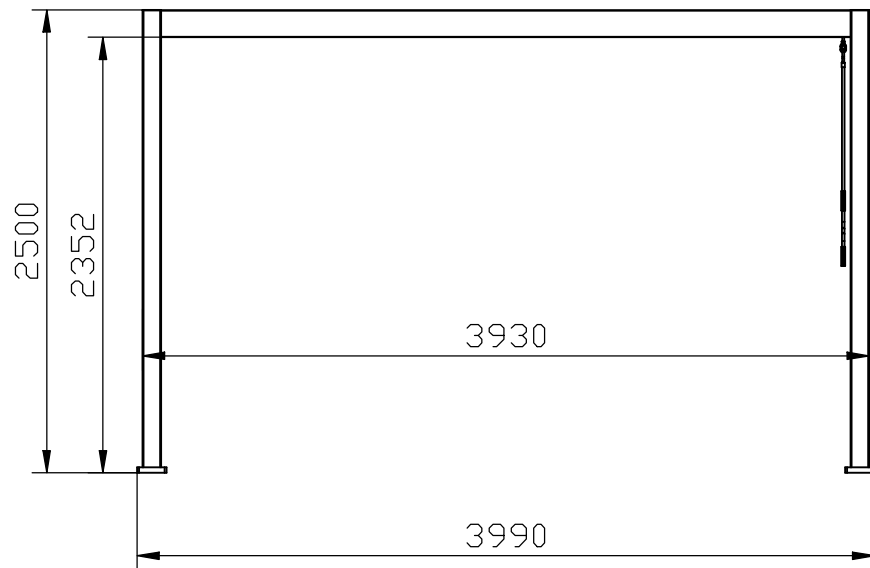



A x4



B1 x1



B2 x1



B3 x1




B4 x1



D X1



D1 x1



F1 x1












F x1




L x1




Q x26

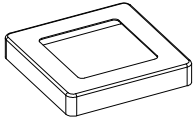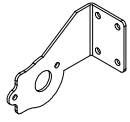
 J x4	 J1 x4	 J2 x4	 M x1
 M1 x1	 V1 x1	 V2 x1	 W x1
 1 x24 M6x15	 2 x2 M6x30	 3 x106 M5x10	 4 x8 ST5.5x16
 5 x2 M5x15	 6 x50 M6x42	 x1  x1	



A x4



J x4

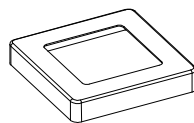


J1 x4




M6x15

1 x16

<1>

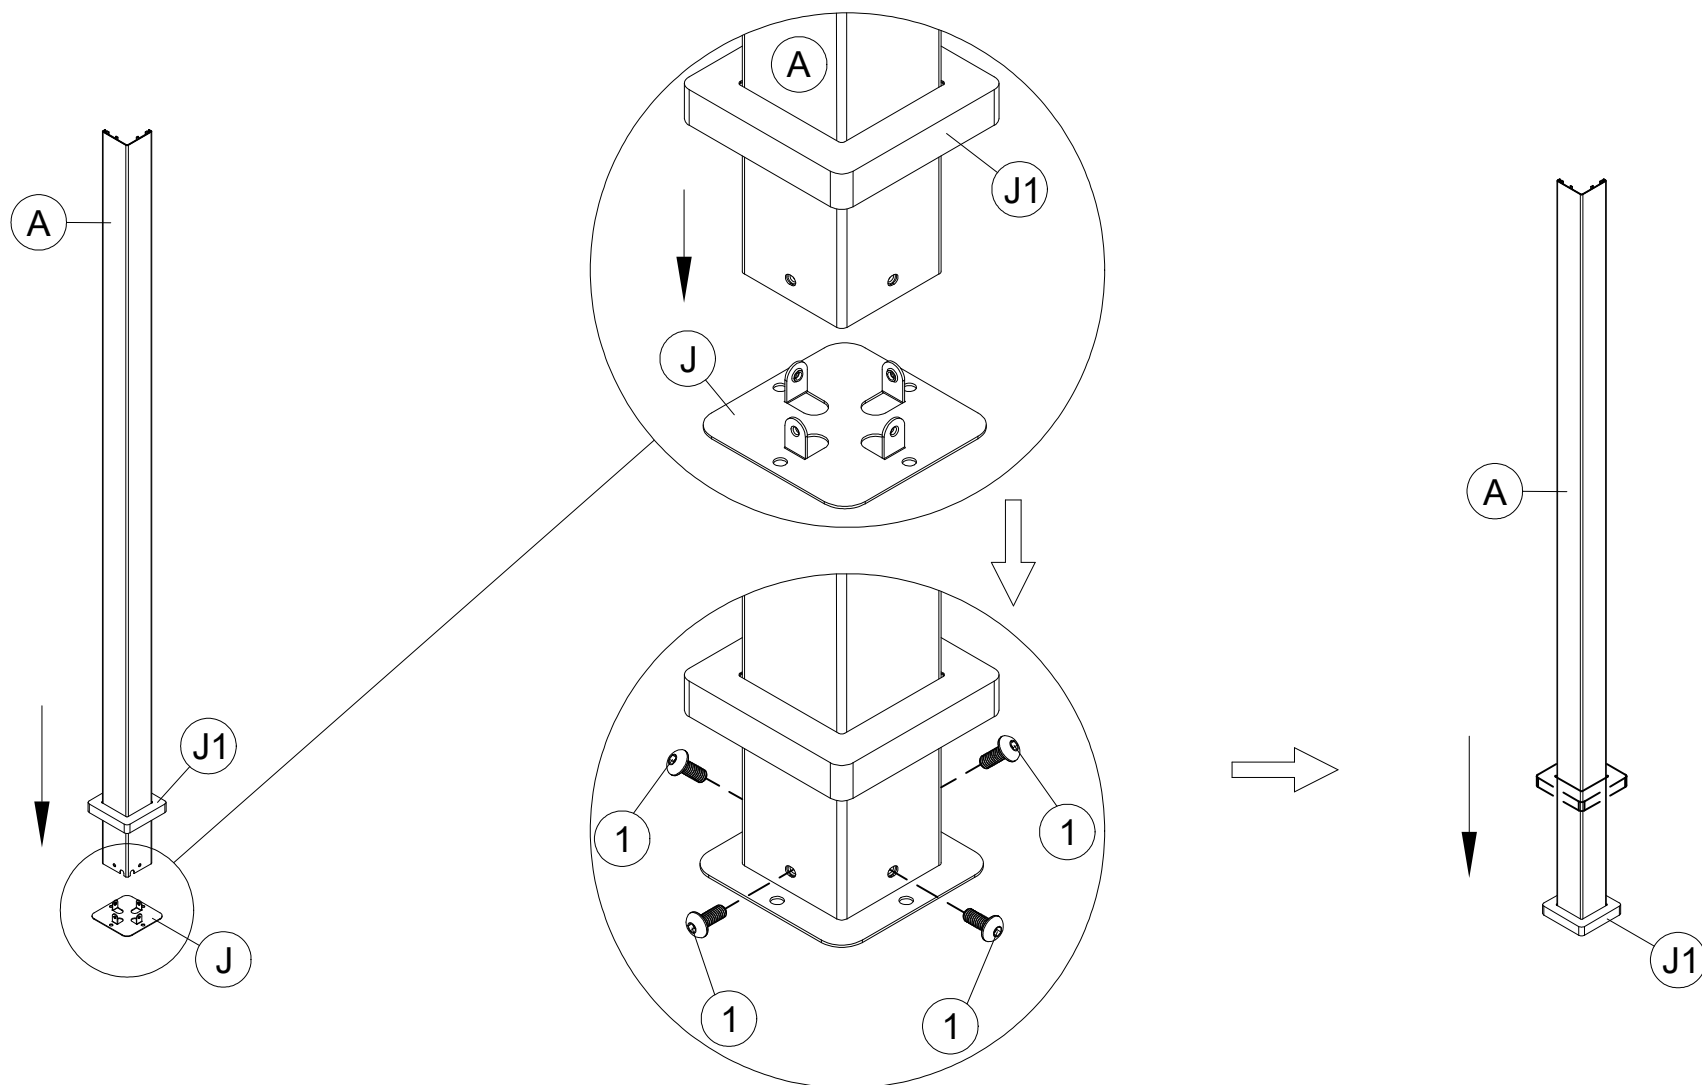




B2 x1




D X1



M6x42

6 x25

<2>

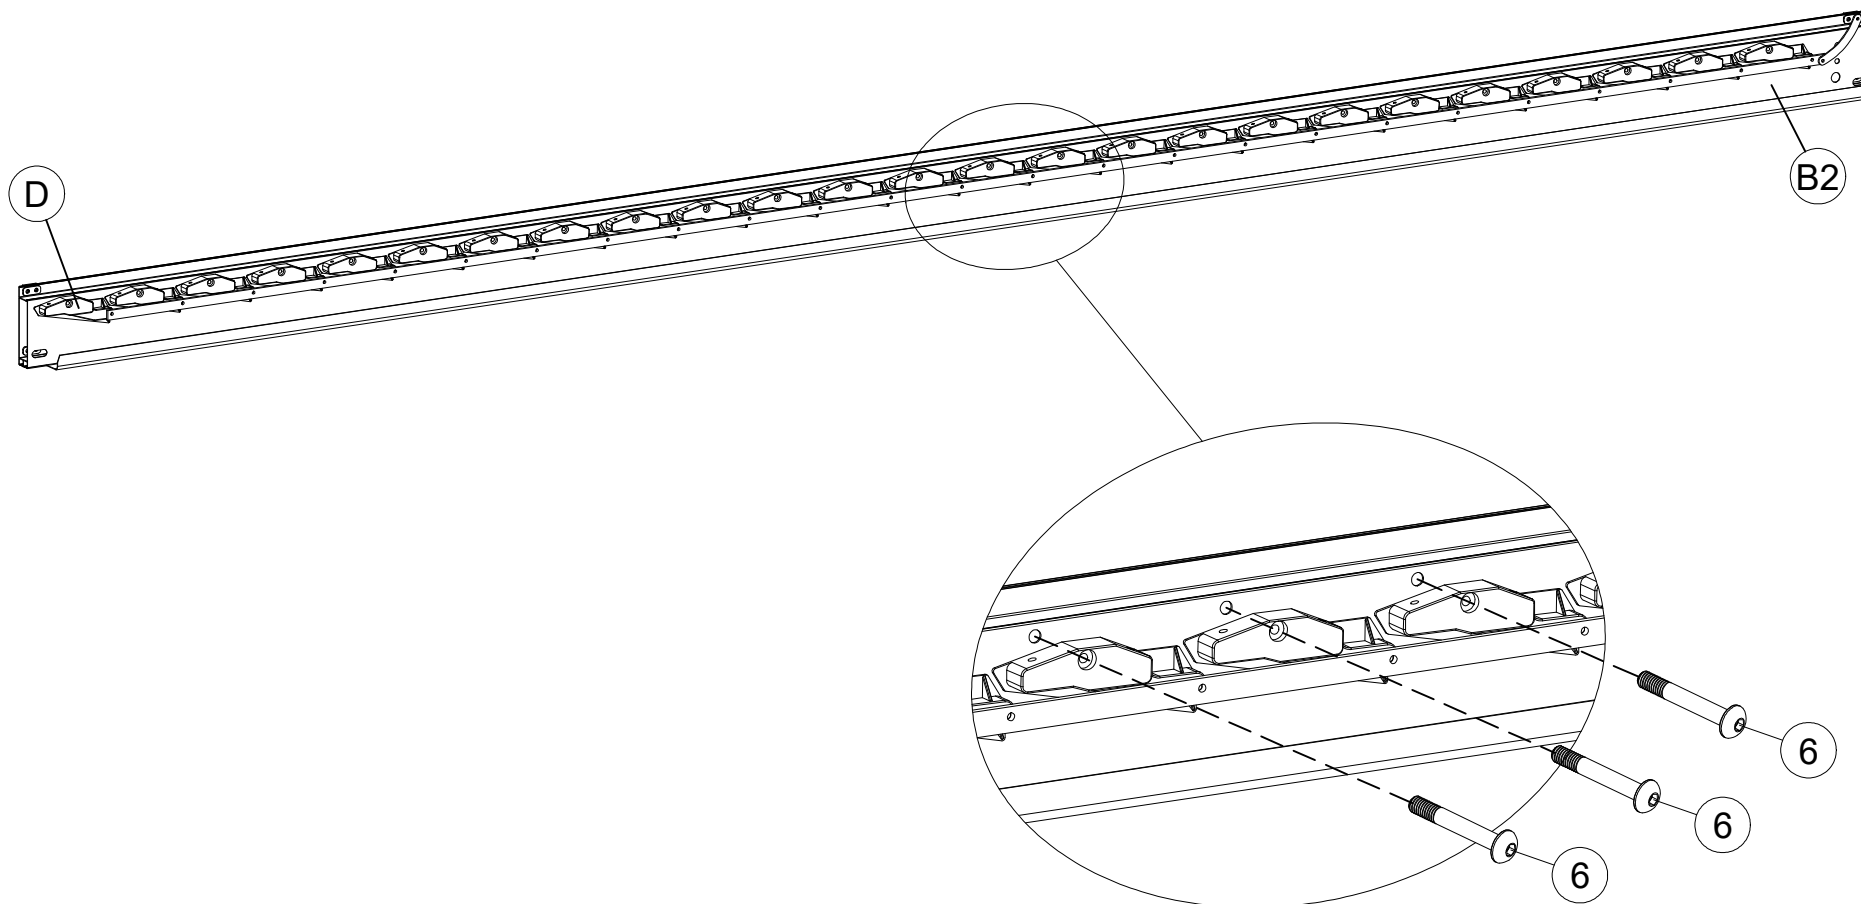



B4 x1




D1 x1



M6x42

6 x25


<3>

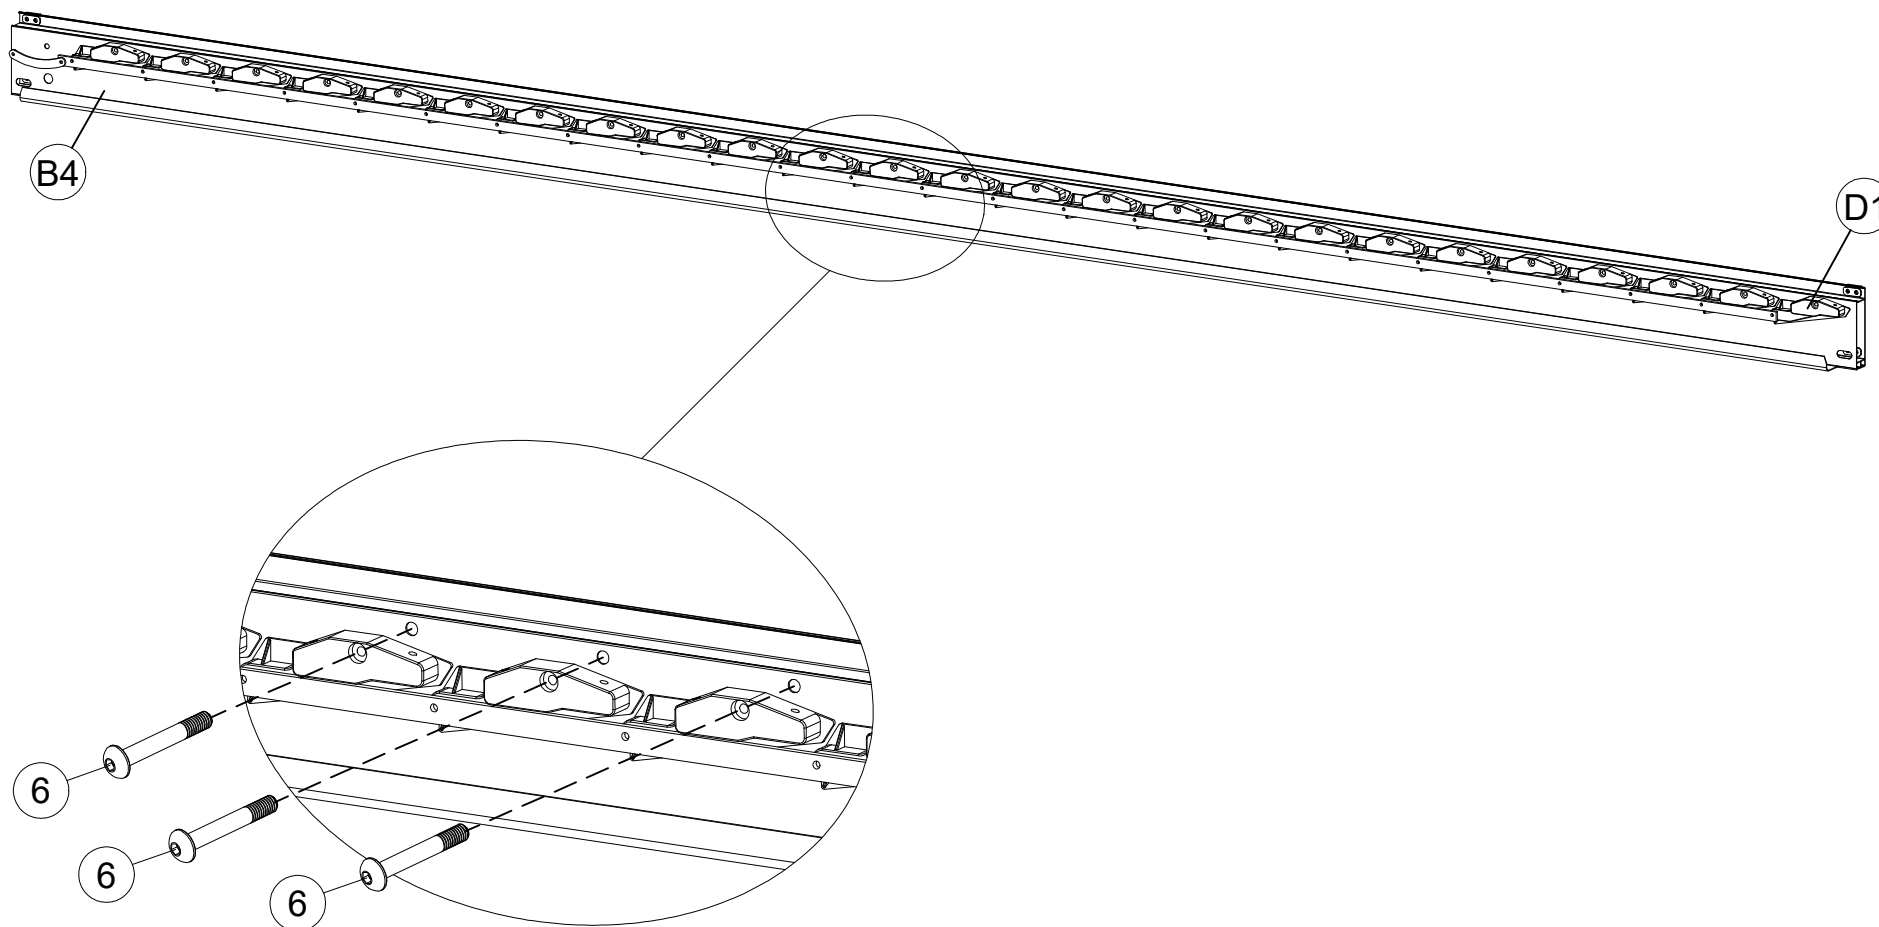



B1 x1


<4>

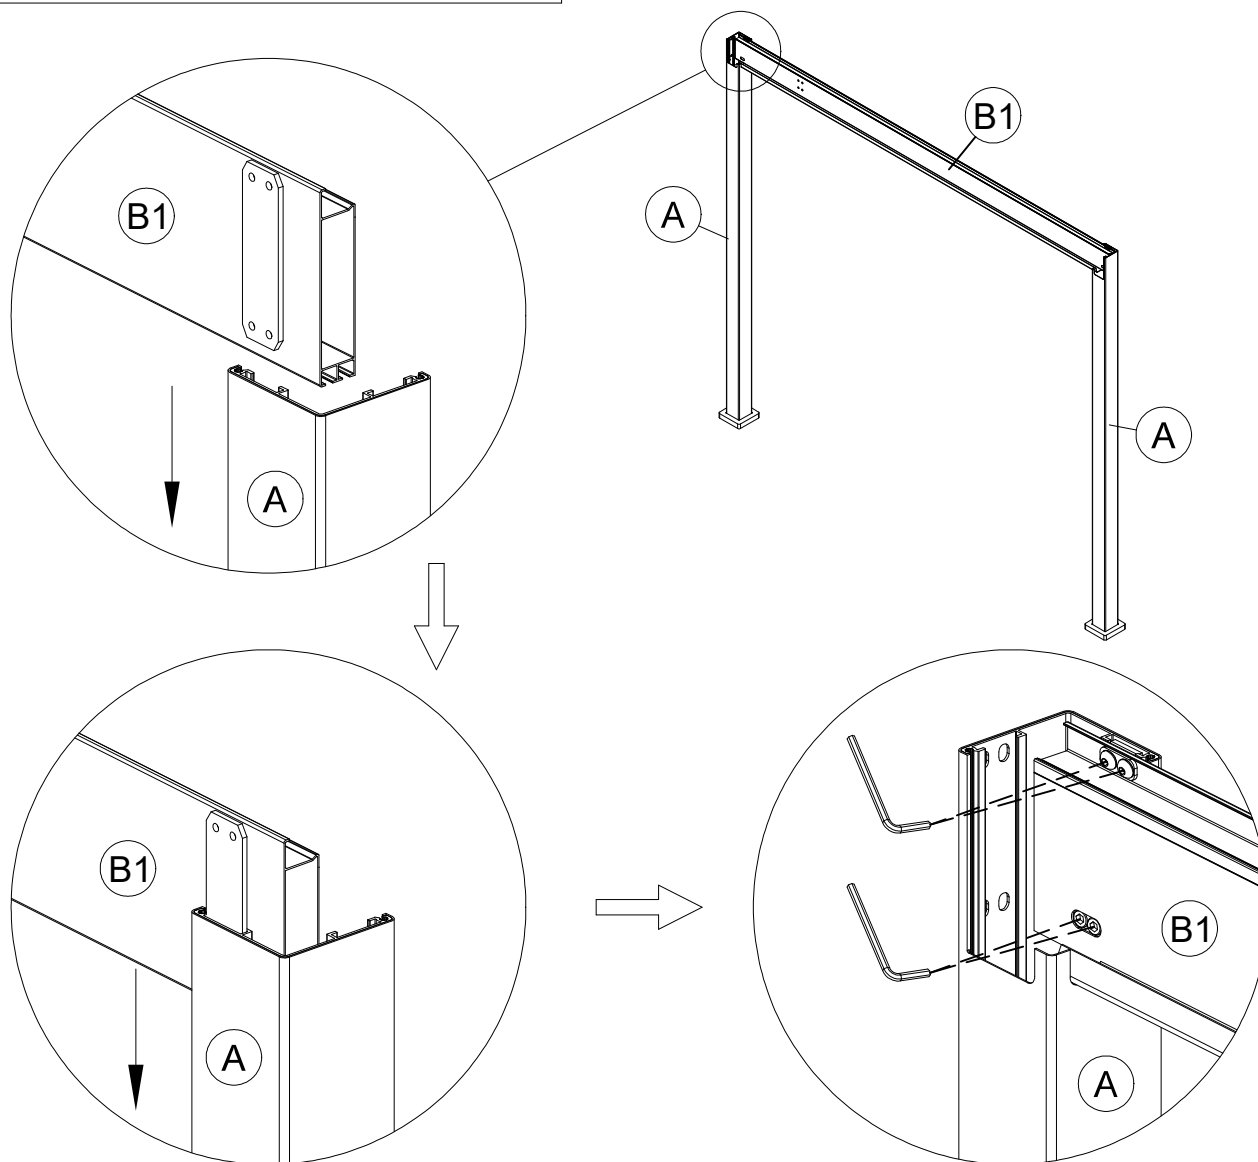




B3 x1


<5>

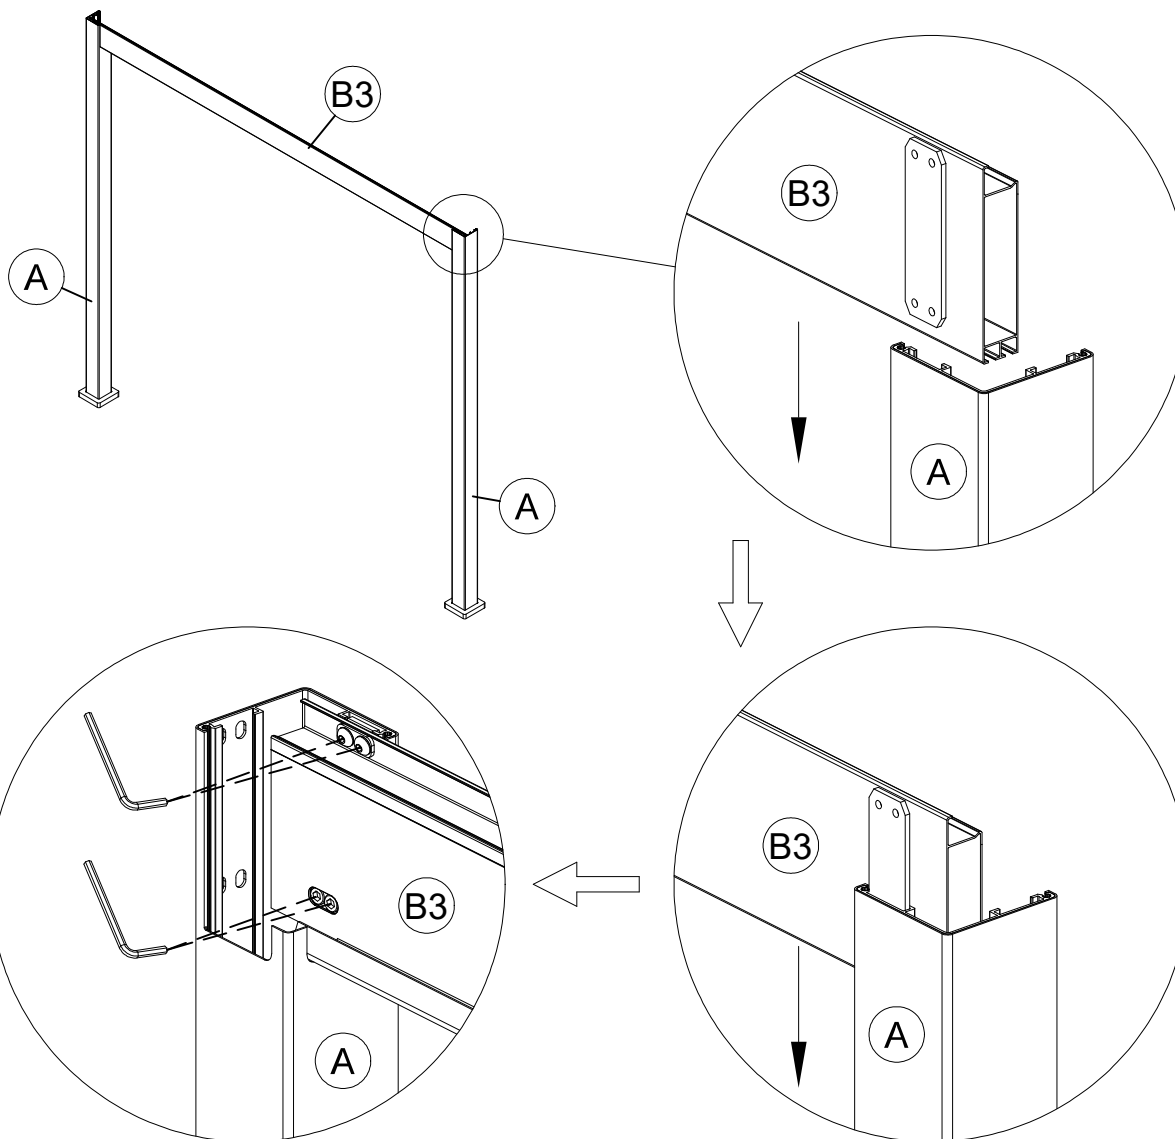


<6>

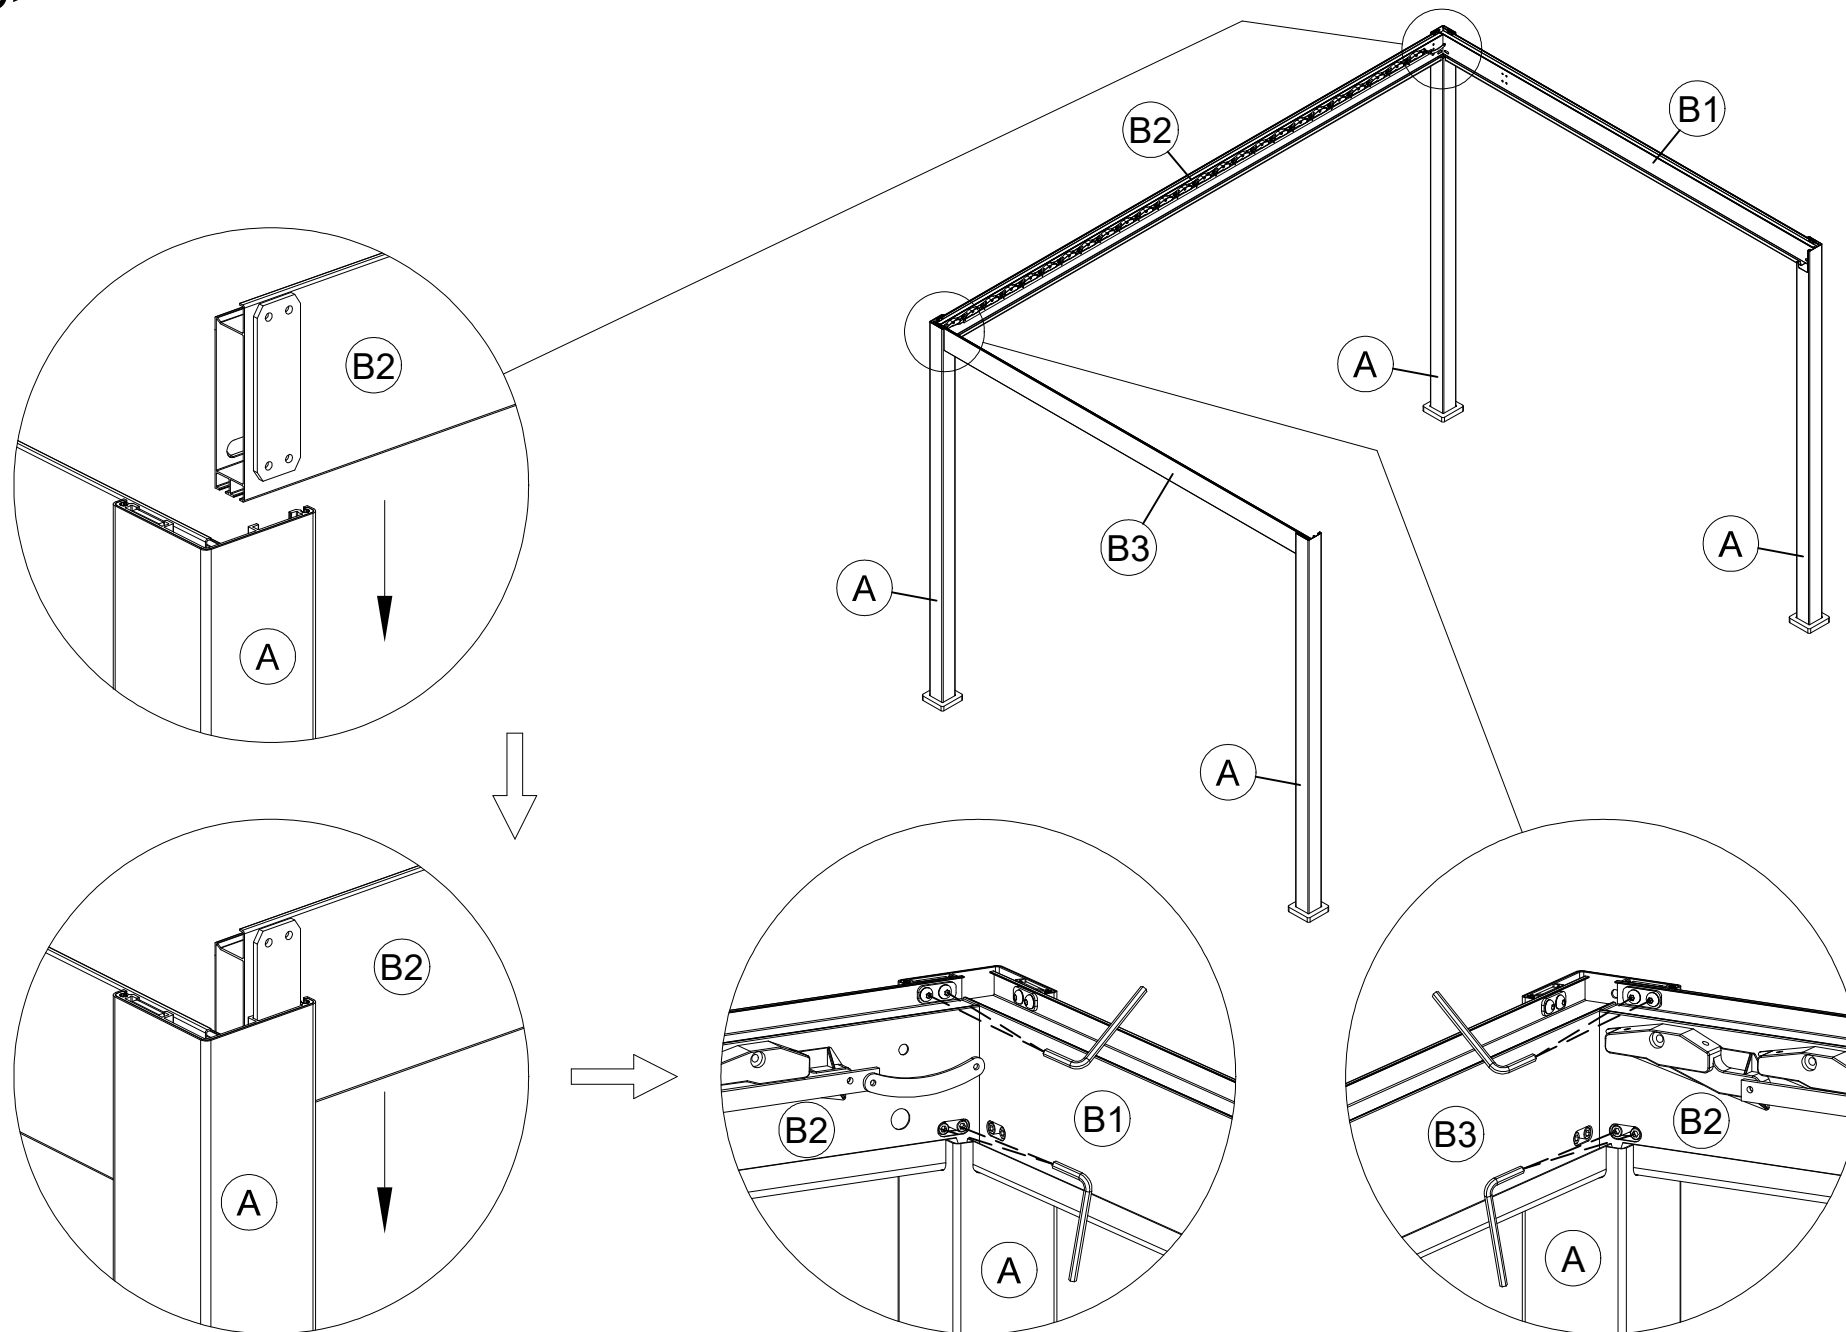


<7>

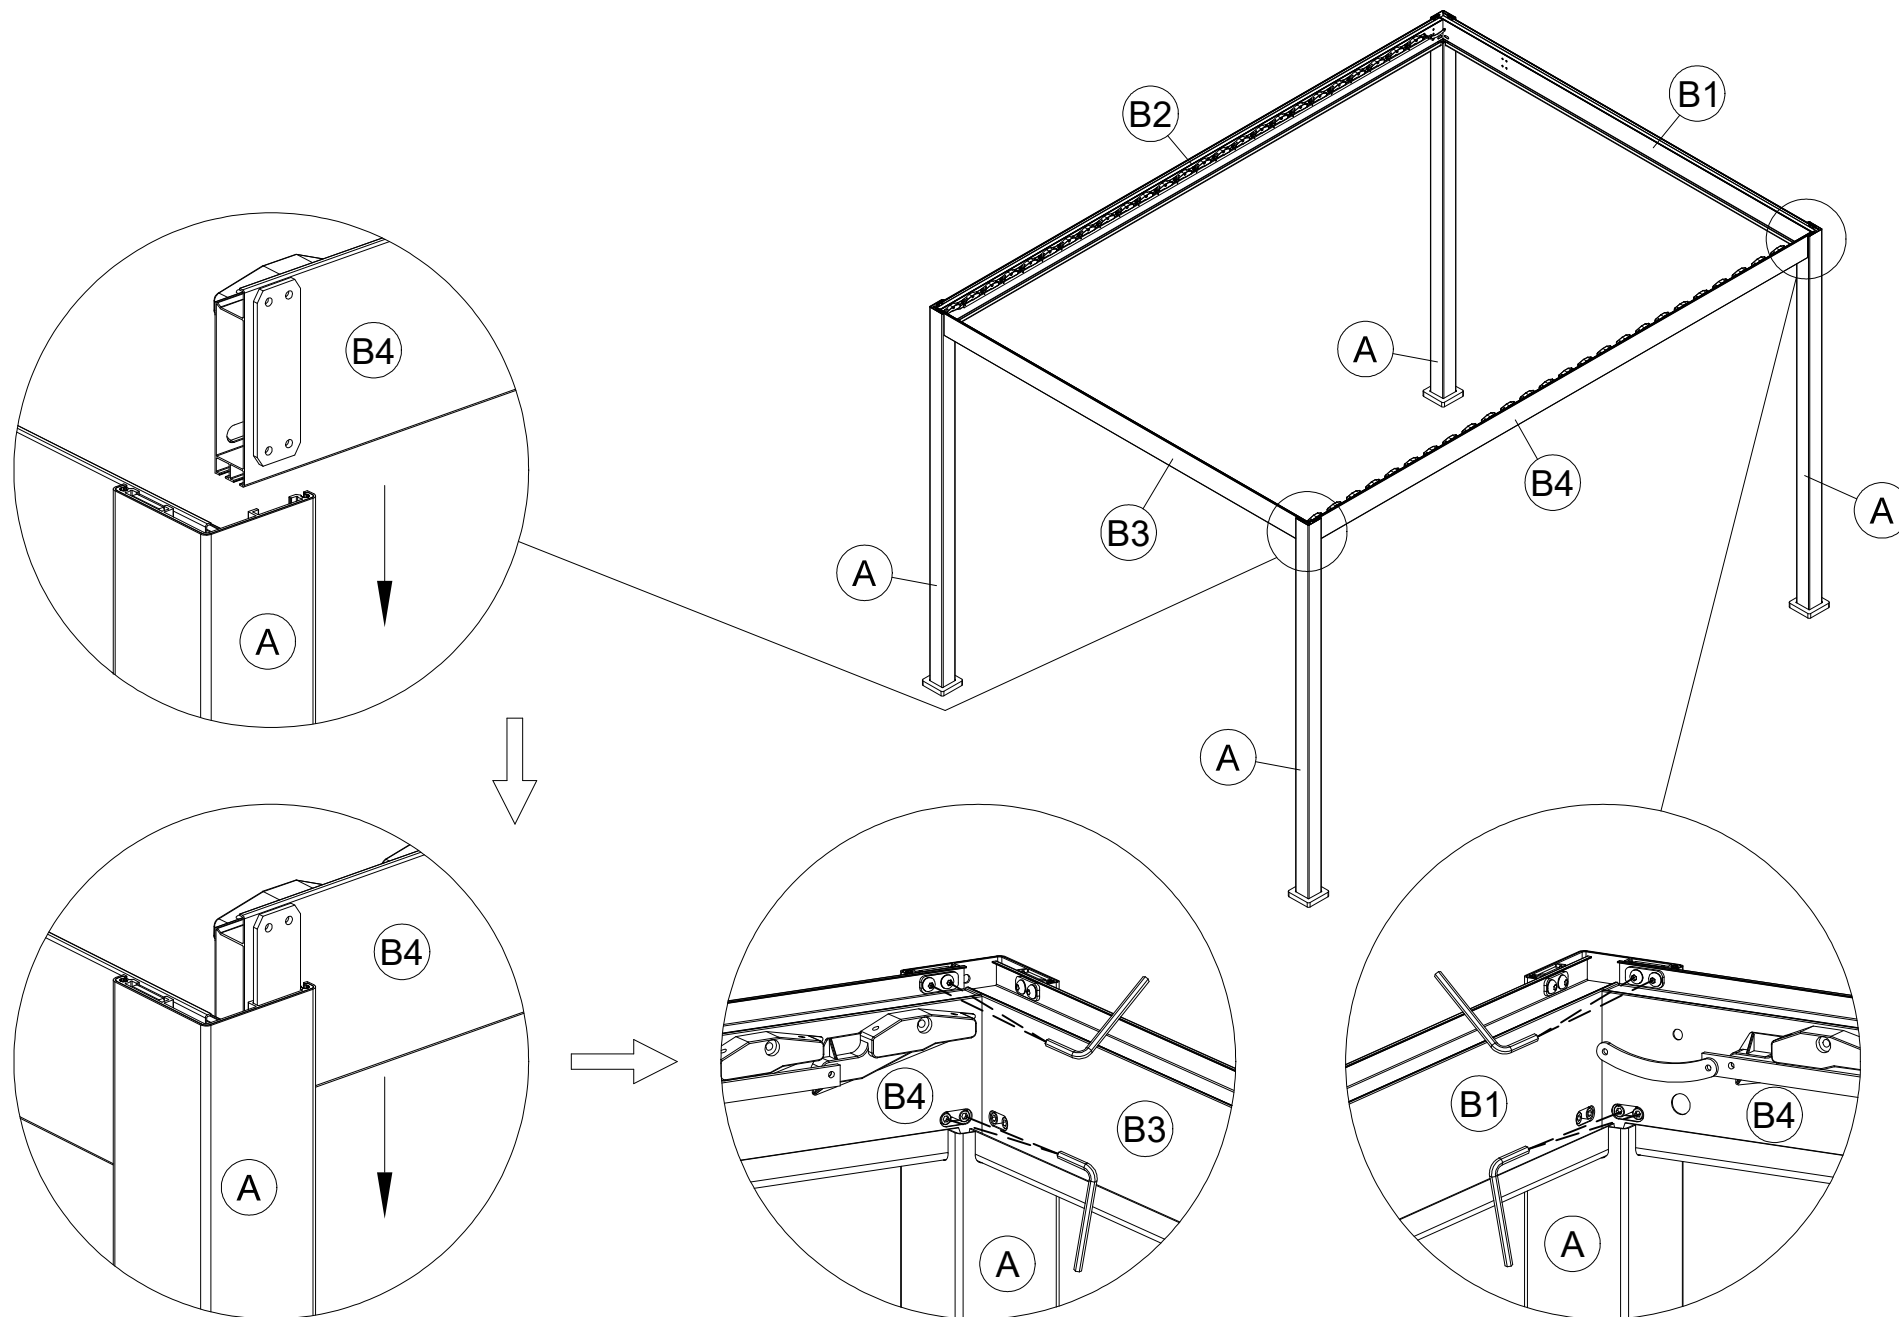


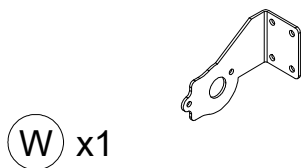


W x1

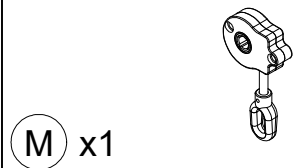

M x1

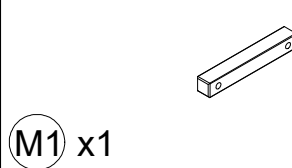


M1 x1




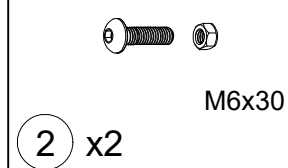


2 x2


M6x30

<8>

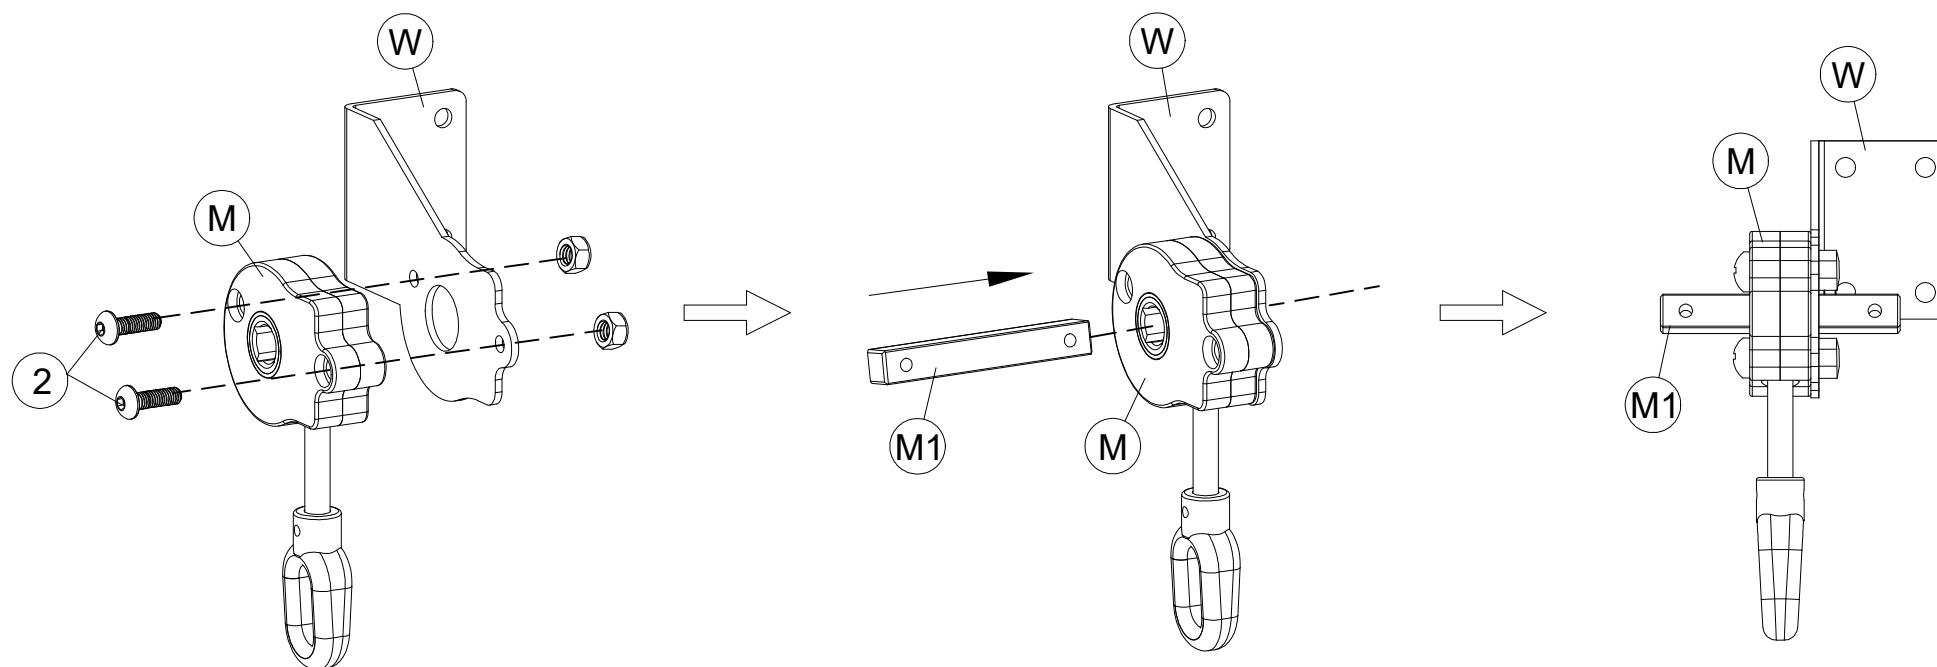

 F1 x1	 F x1	 V1 x1	 V2 x1	 3 x2 M5x10
---	--	---	---	---

<9>




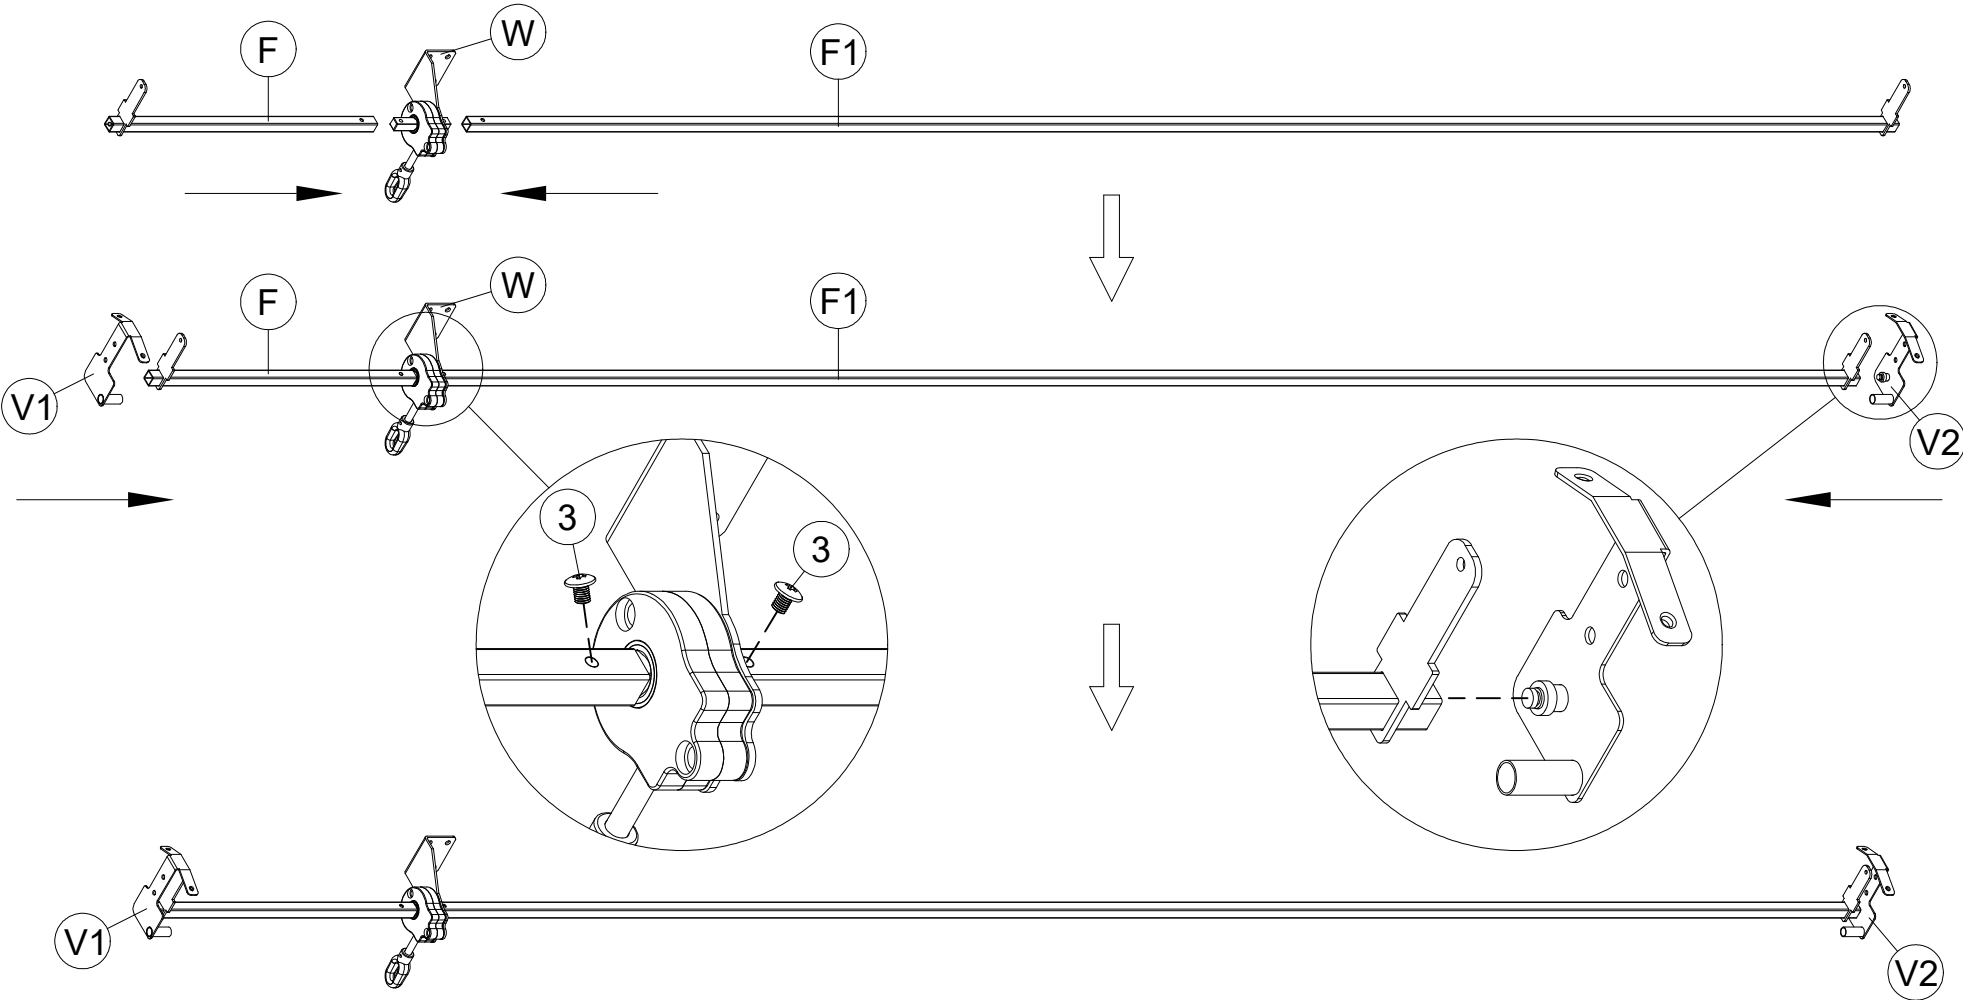




M6x15

1 x8

<10>

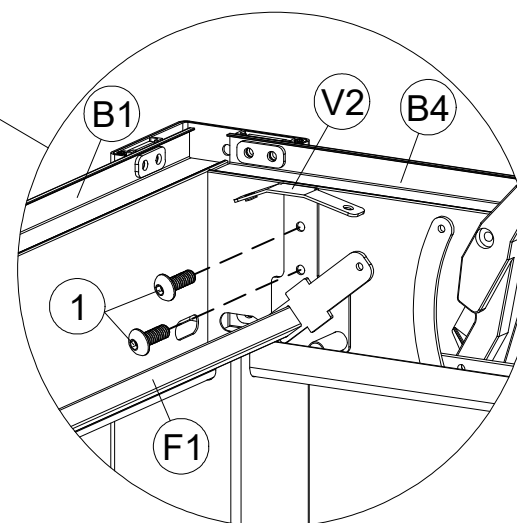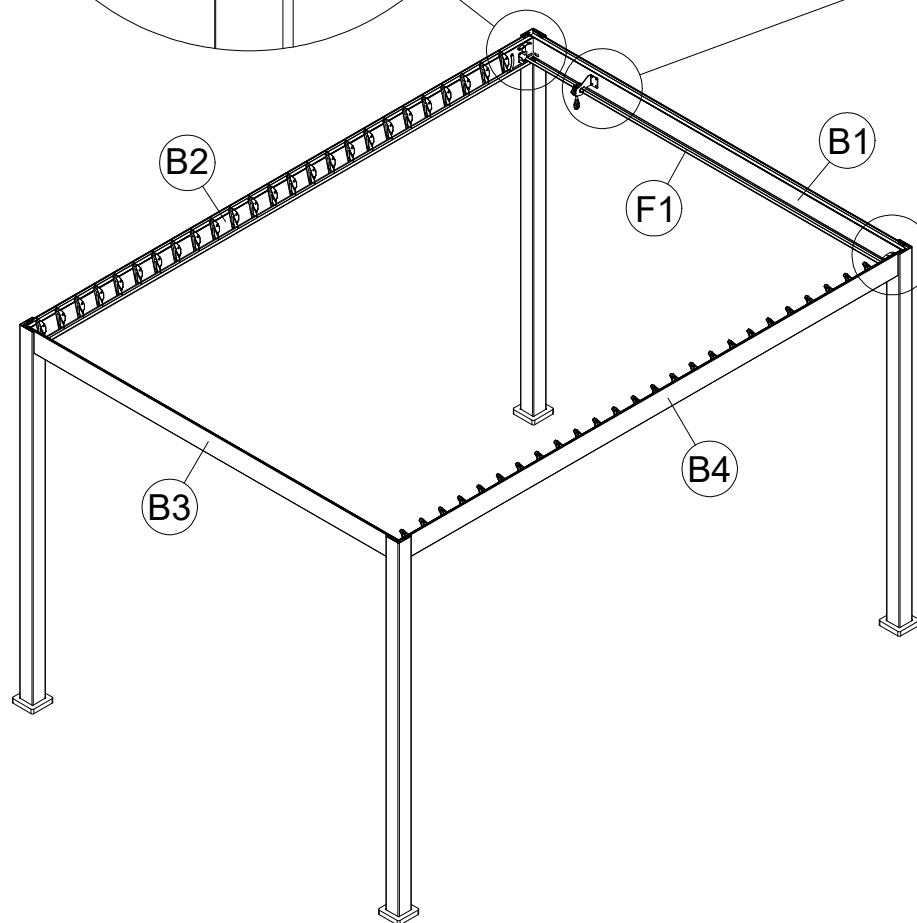
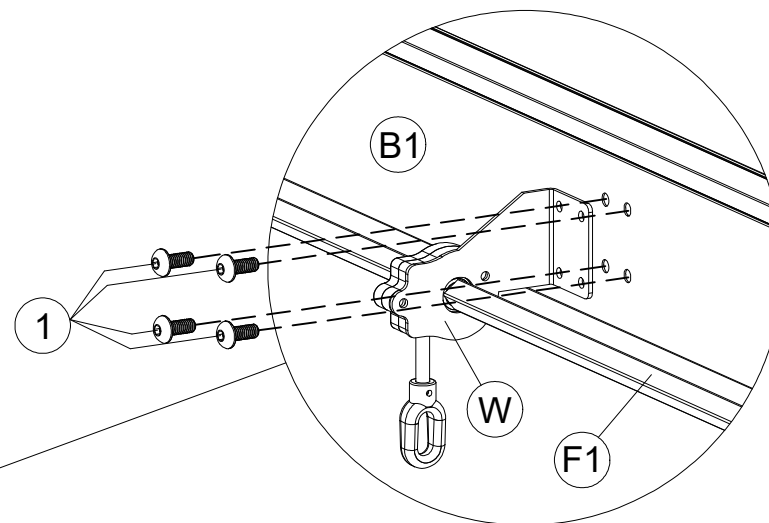
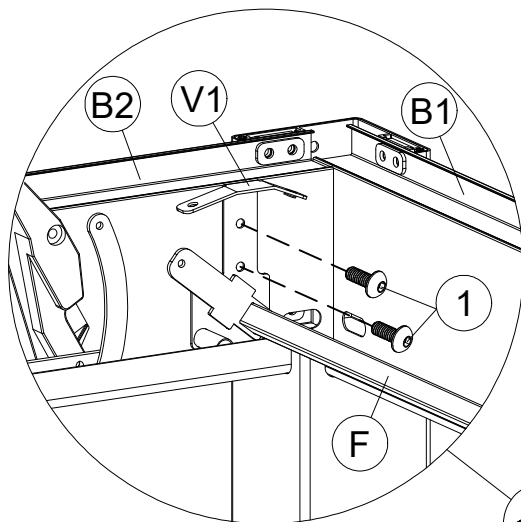




M5x15

5 x2


<11>

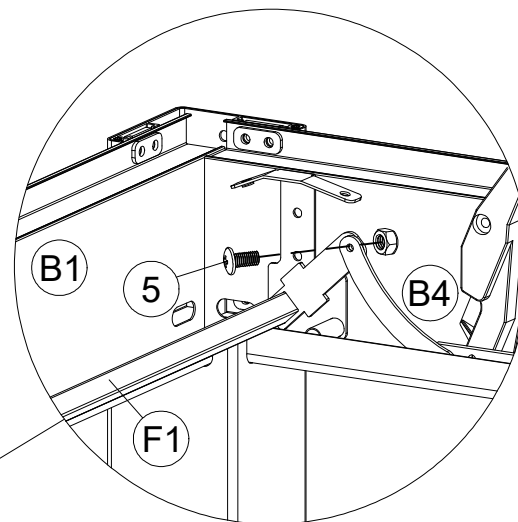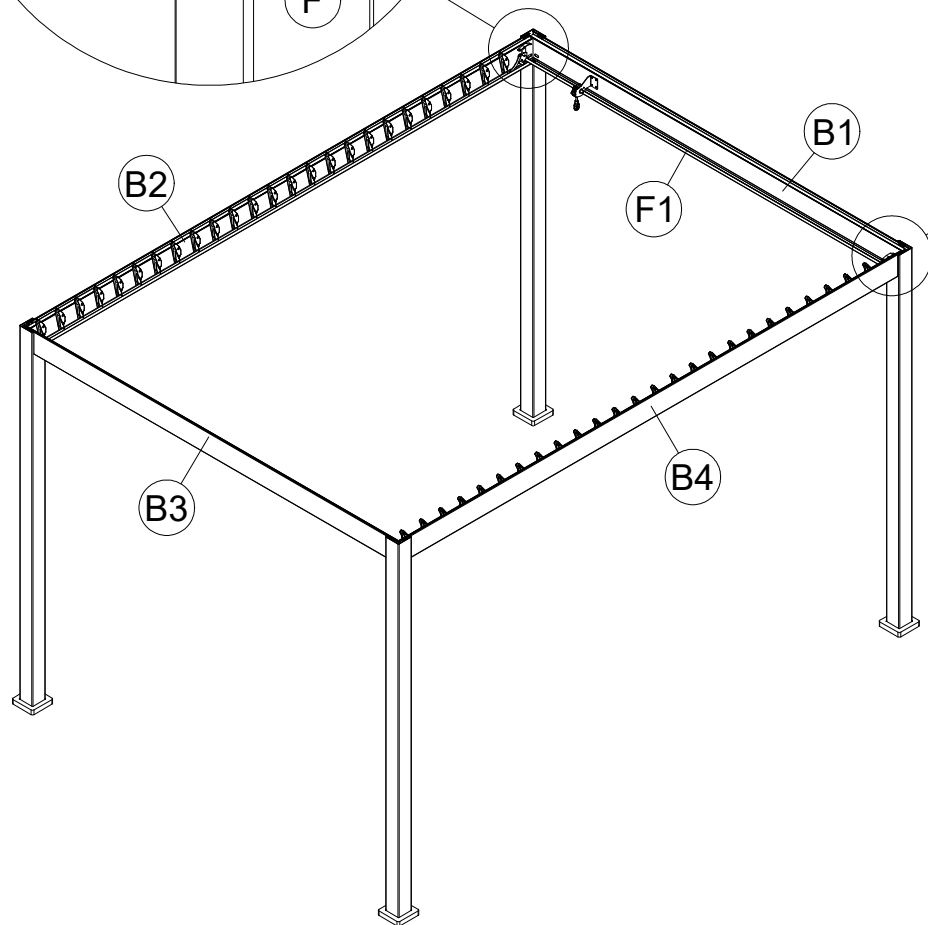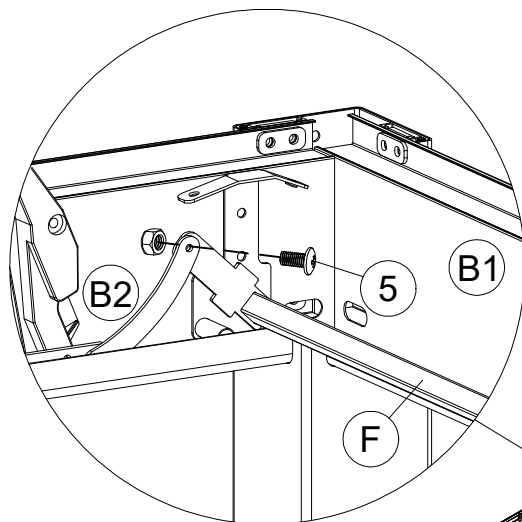







L x1

<12>

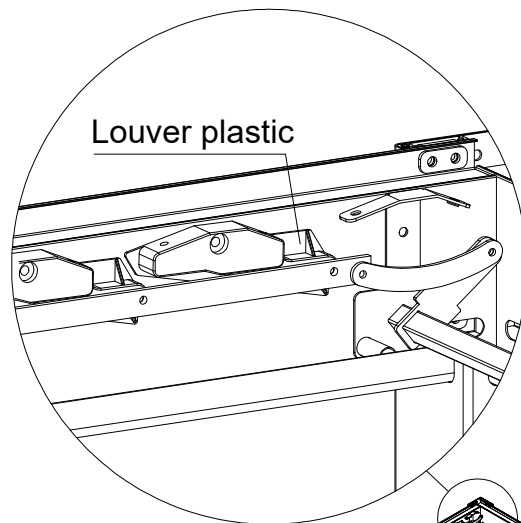

Tips: Twirl the " L " to make the louver plastic flat.

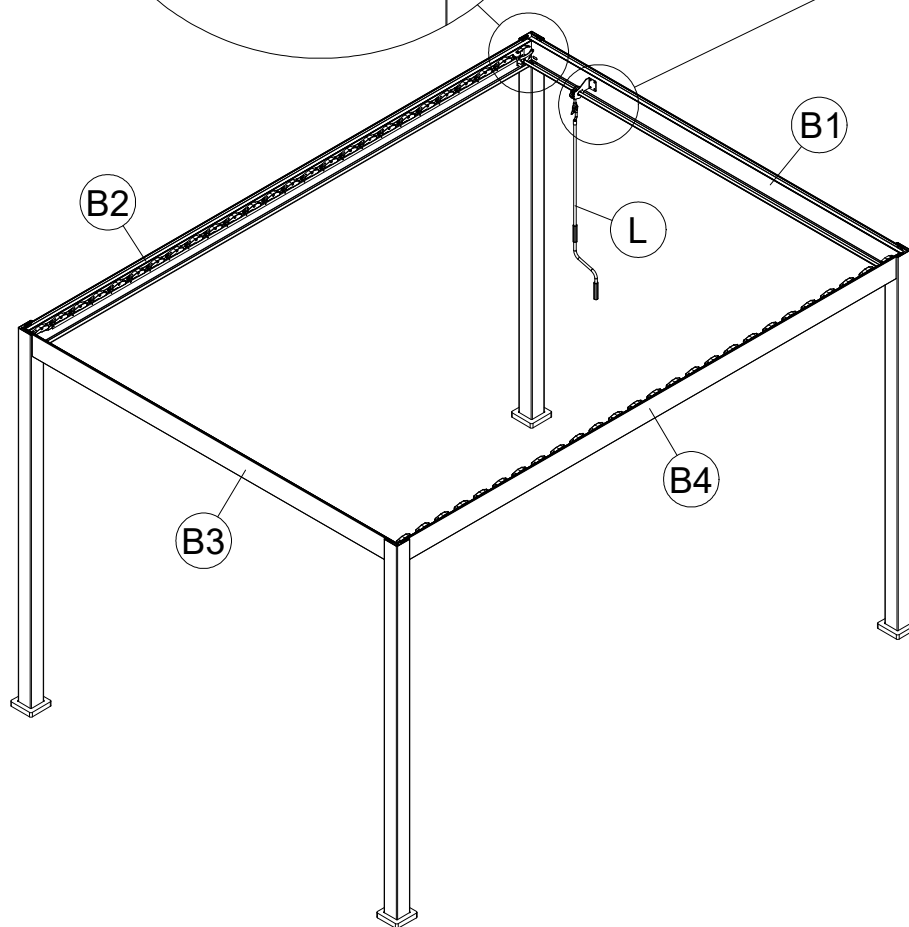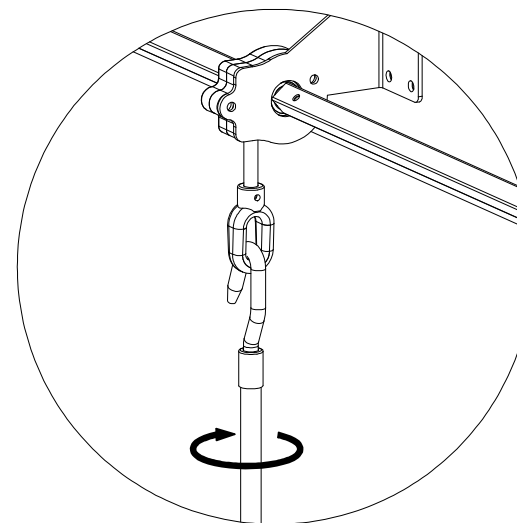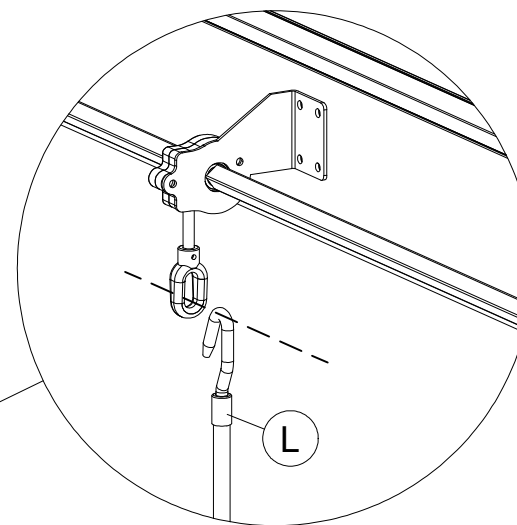




M5x10





Q x26

3 x104


<13>

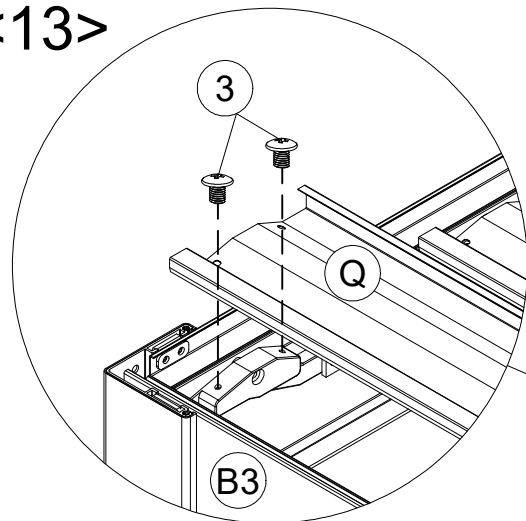

Tips: Louver "Q" assemble
order from B3 to B1

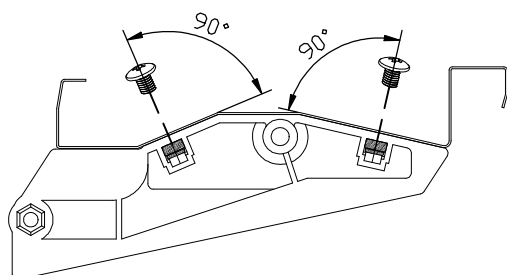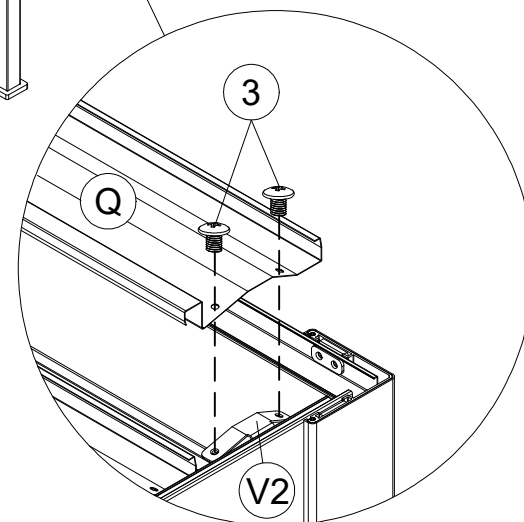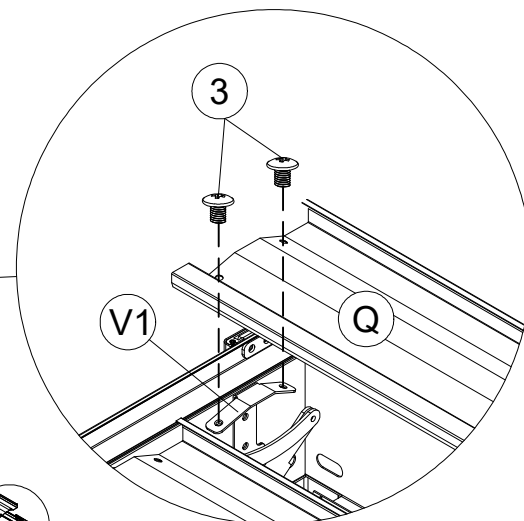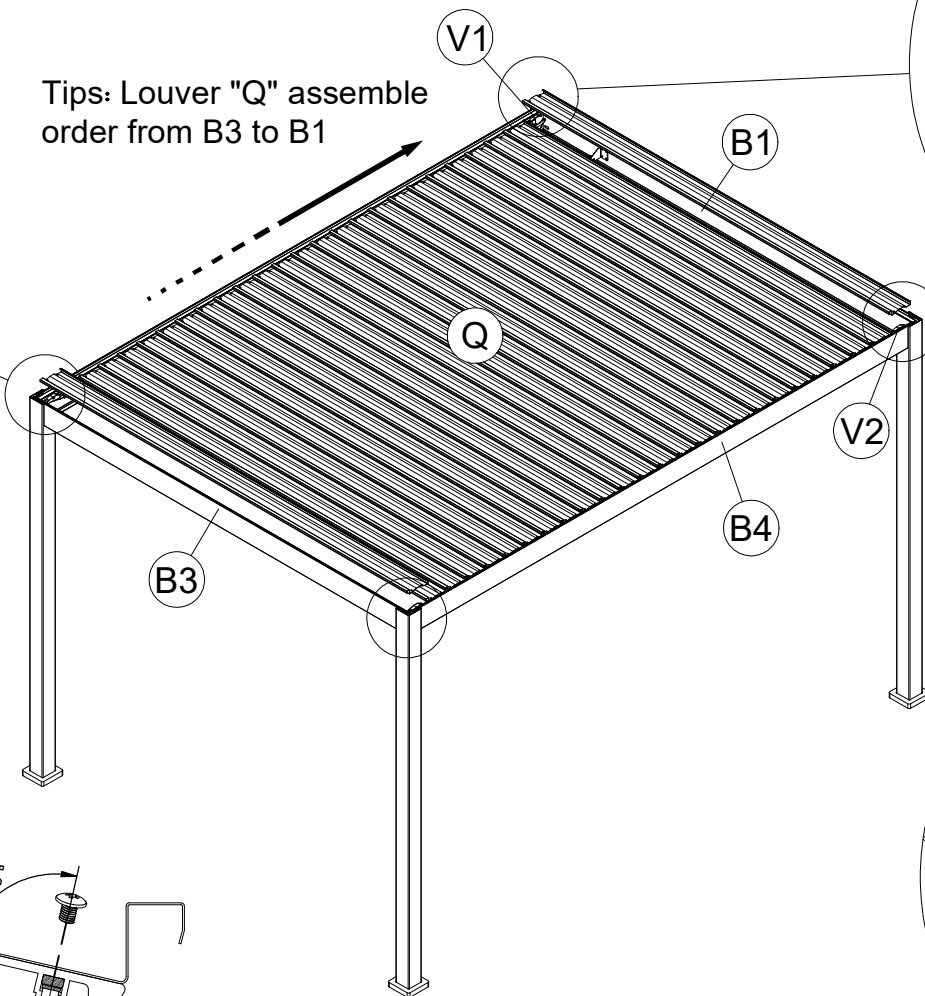

Tips: Move the poles if there's a deviation
between the louver holes and the plastic holes.

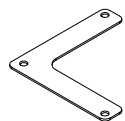

J2 x4



ST5.5x16

4 x8

<14>

