


3 x 3 M

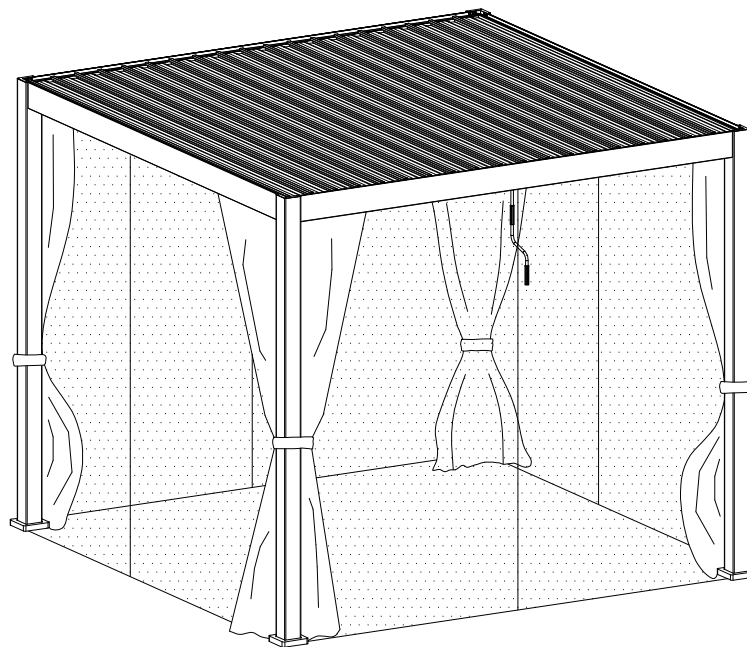





YS5002




At least need 3person work together











REQUIRED TOOLS



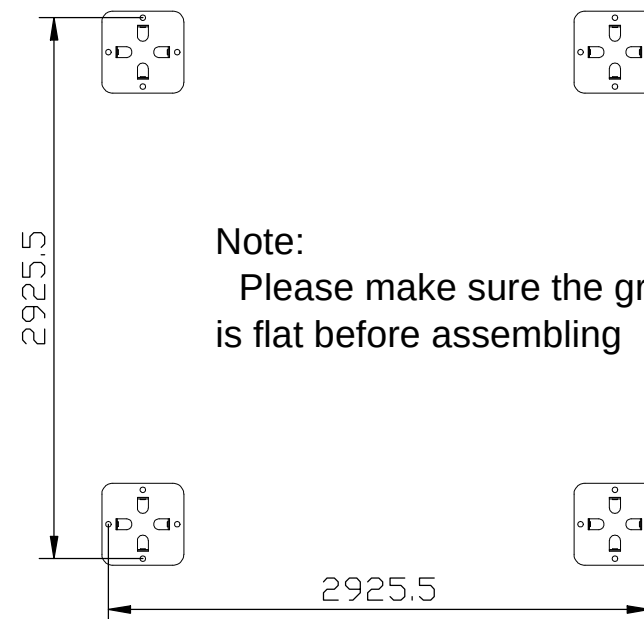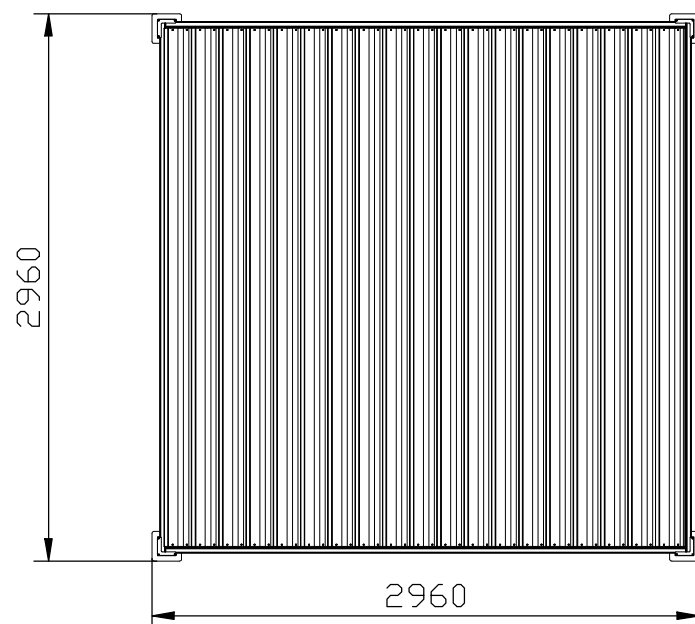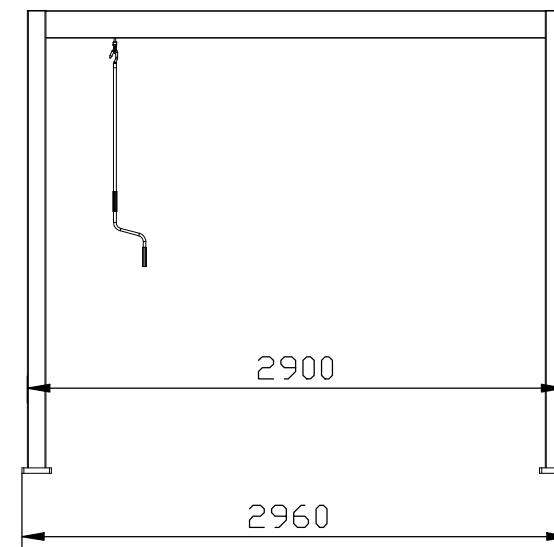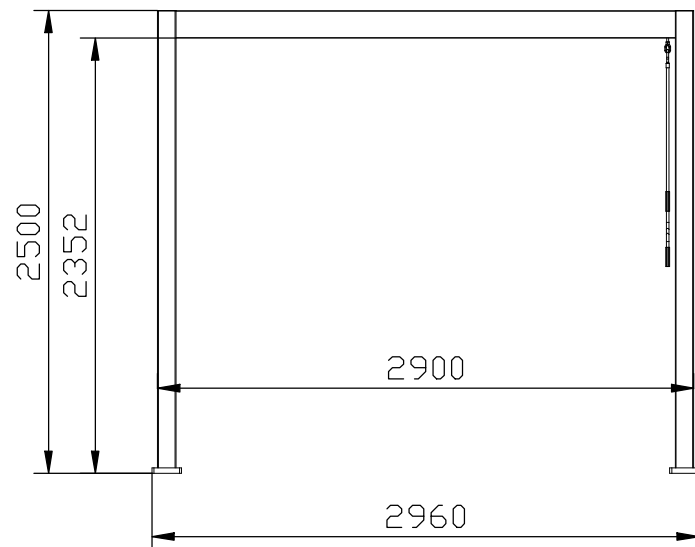


Note:
Please make sure the ground
is flat before assembling

 (A) x4	 (B1) x1
 (B2) x1	 (B3) x1
 (B4) x1	 (D) X1
 (D1) x1	 (F1) x1
 (F) x1	 (L) x1
 (Q) x19	

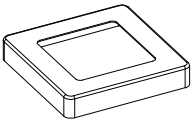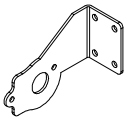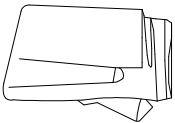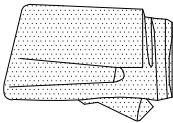
 J x4	 J1 x4	 J2 x4	 M x1
 M1 x1	 V1 x1	 V2 x1	 W x1
 T x4	 T1 x4	 U x96	 U1 x8
 1 x24 M6x15	 2 x2 M6x30	 3 x78 M5x10	 4 x8 ST5.5x16
 5 x2 M5x15	 6 x36 M6x42	 3 x78 M5x10	 4 x8 ST5.5x16



A x4



J x4

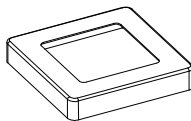


J1 x4




M6x15

1 x16

<1>

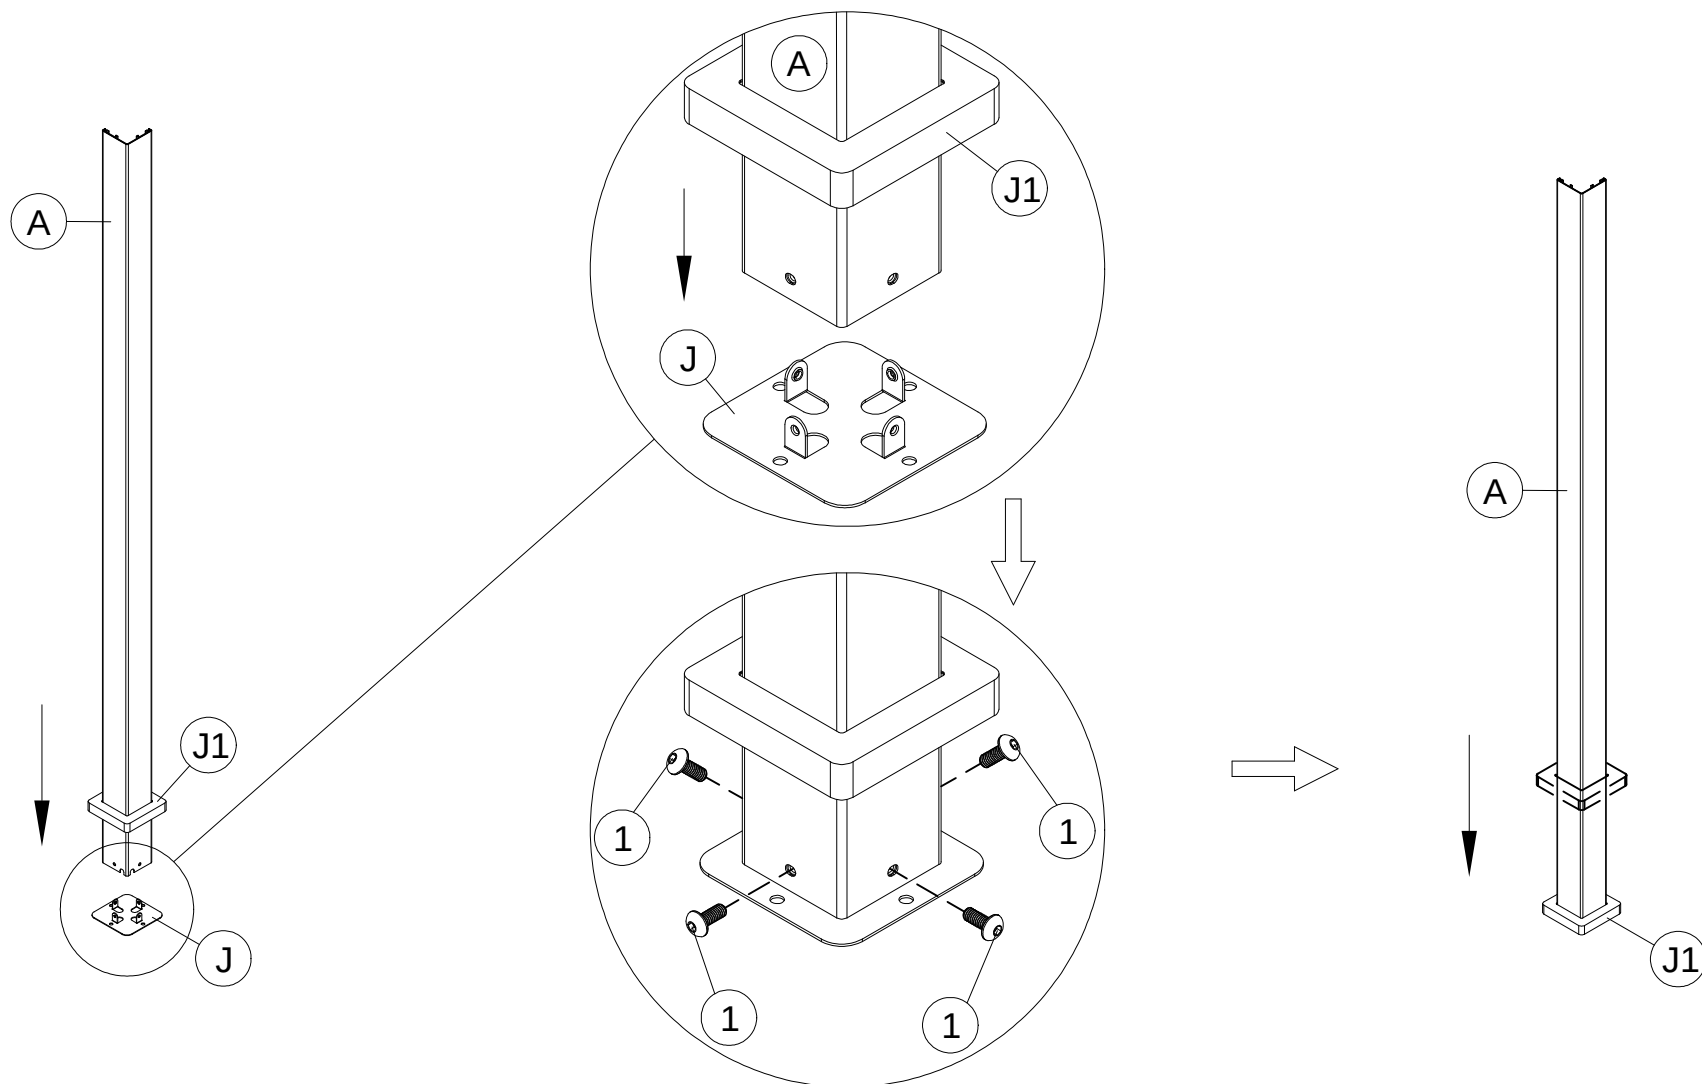



B2 x1




D X1




M6x42

6 x18

<2>

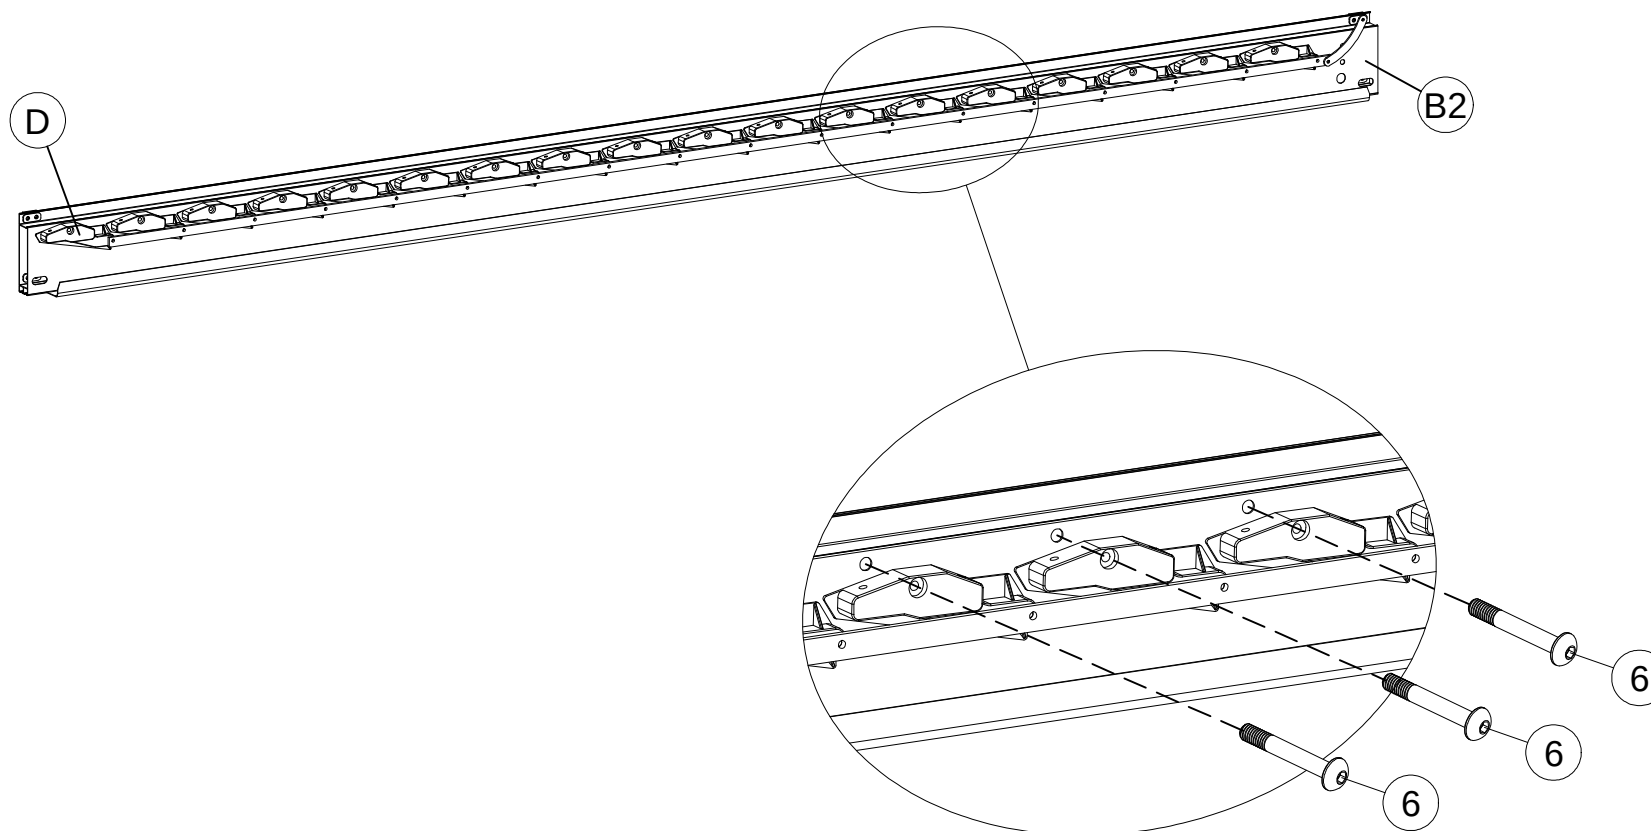




B4 x1




D1 x1



6 x18

M6x42


<3>

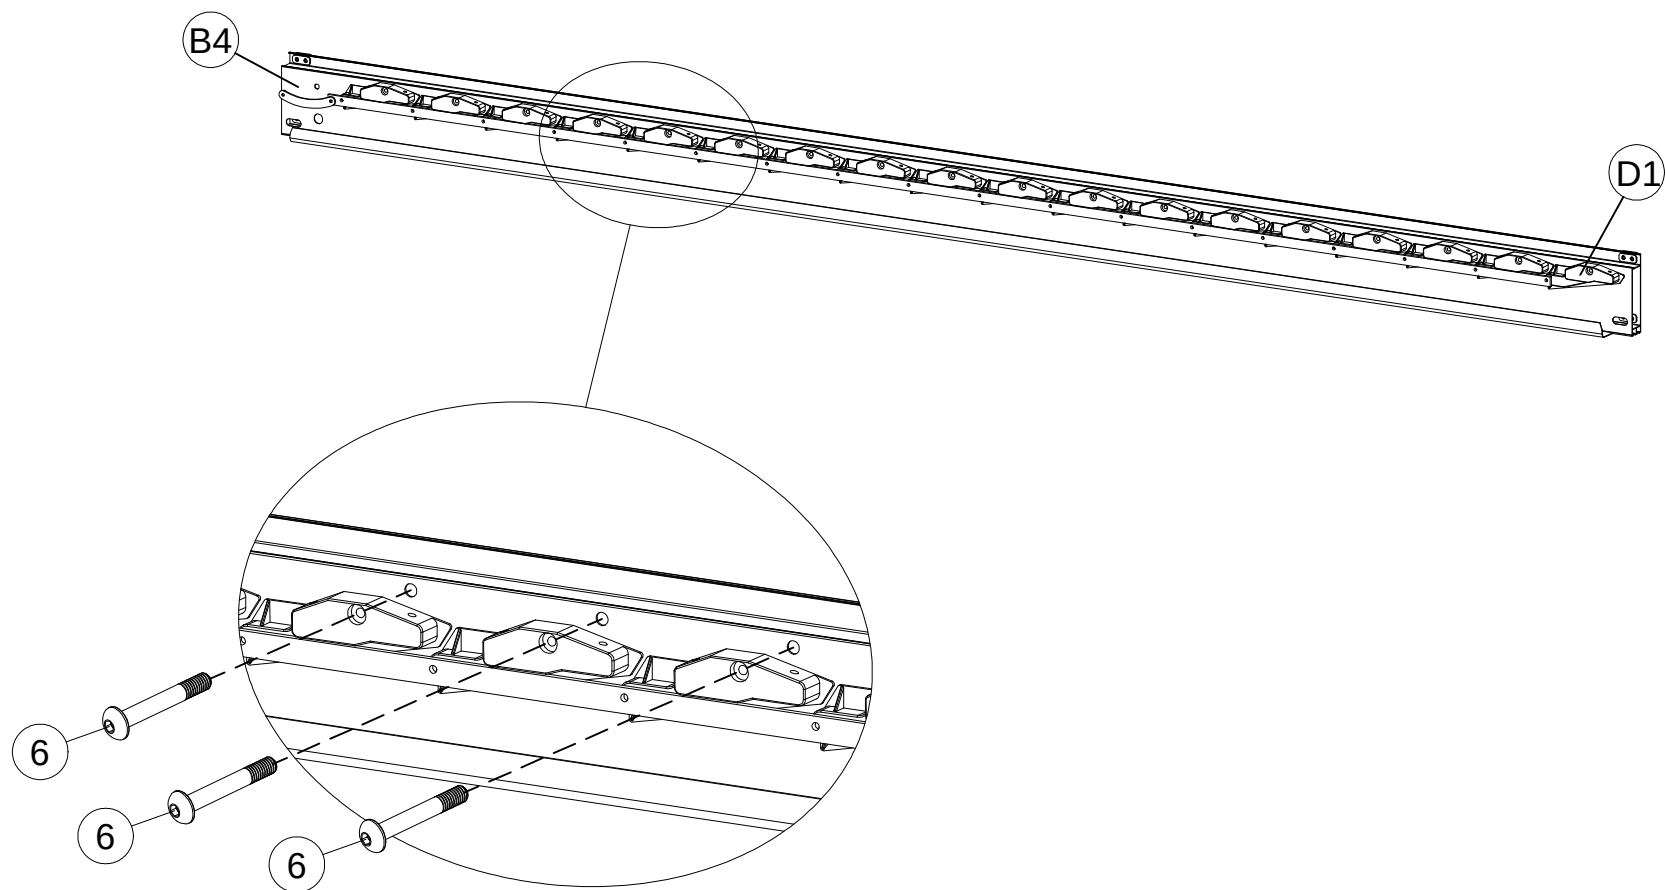




B1 x1


<4>

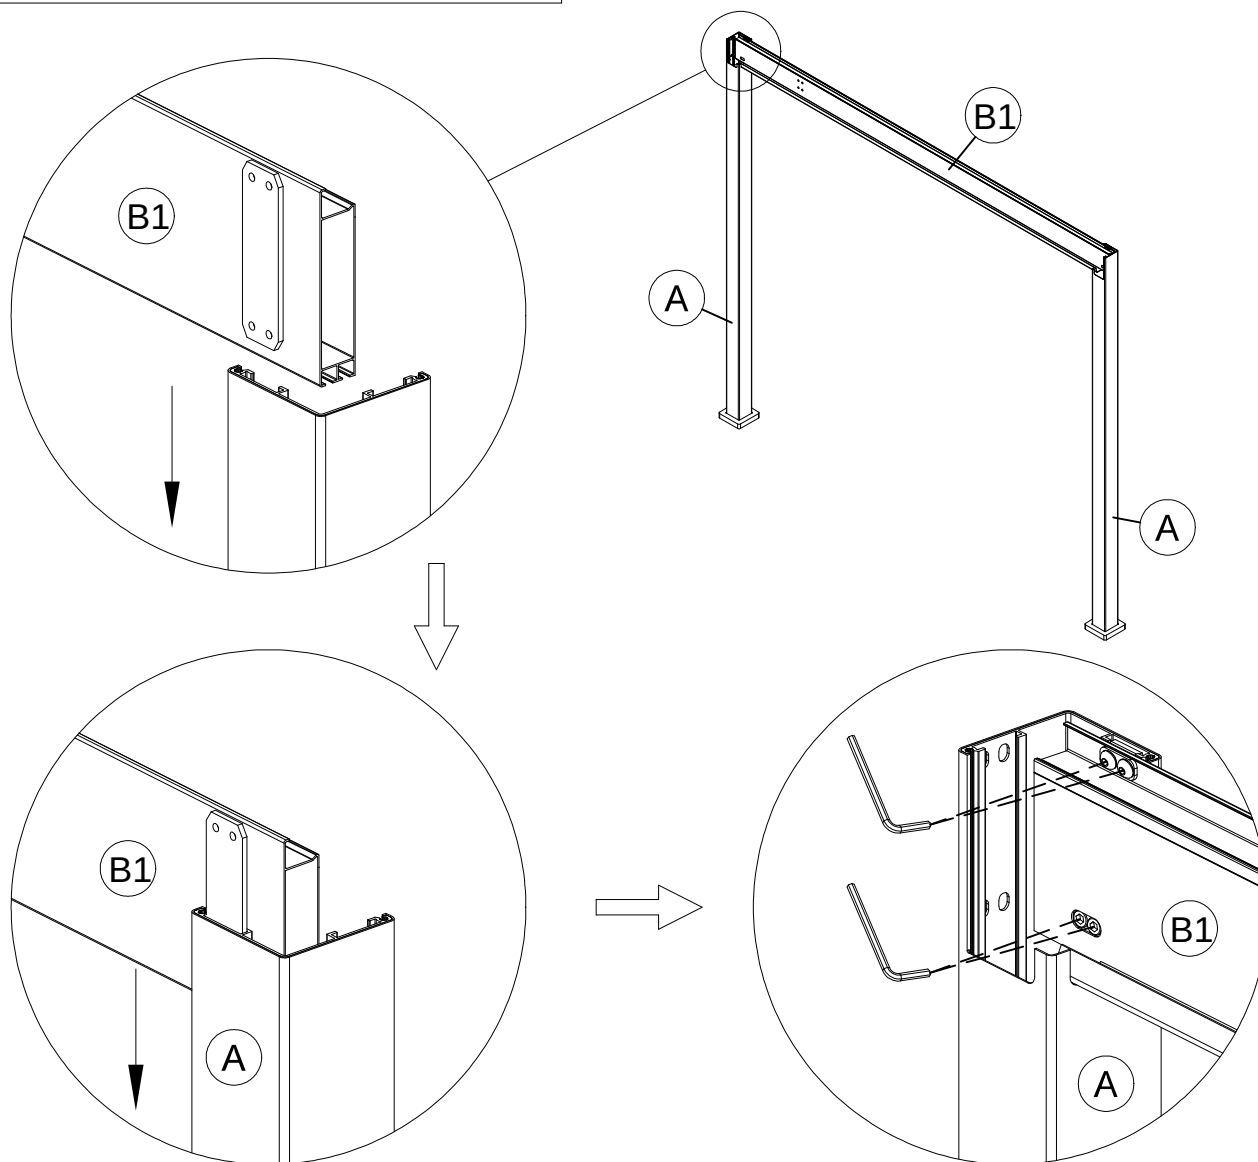




(B3) x1


<5>




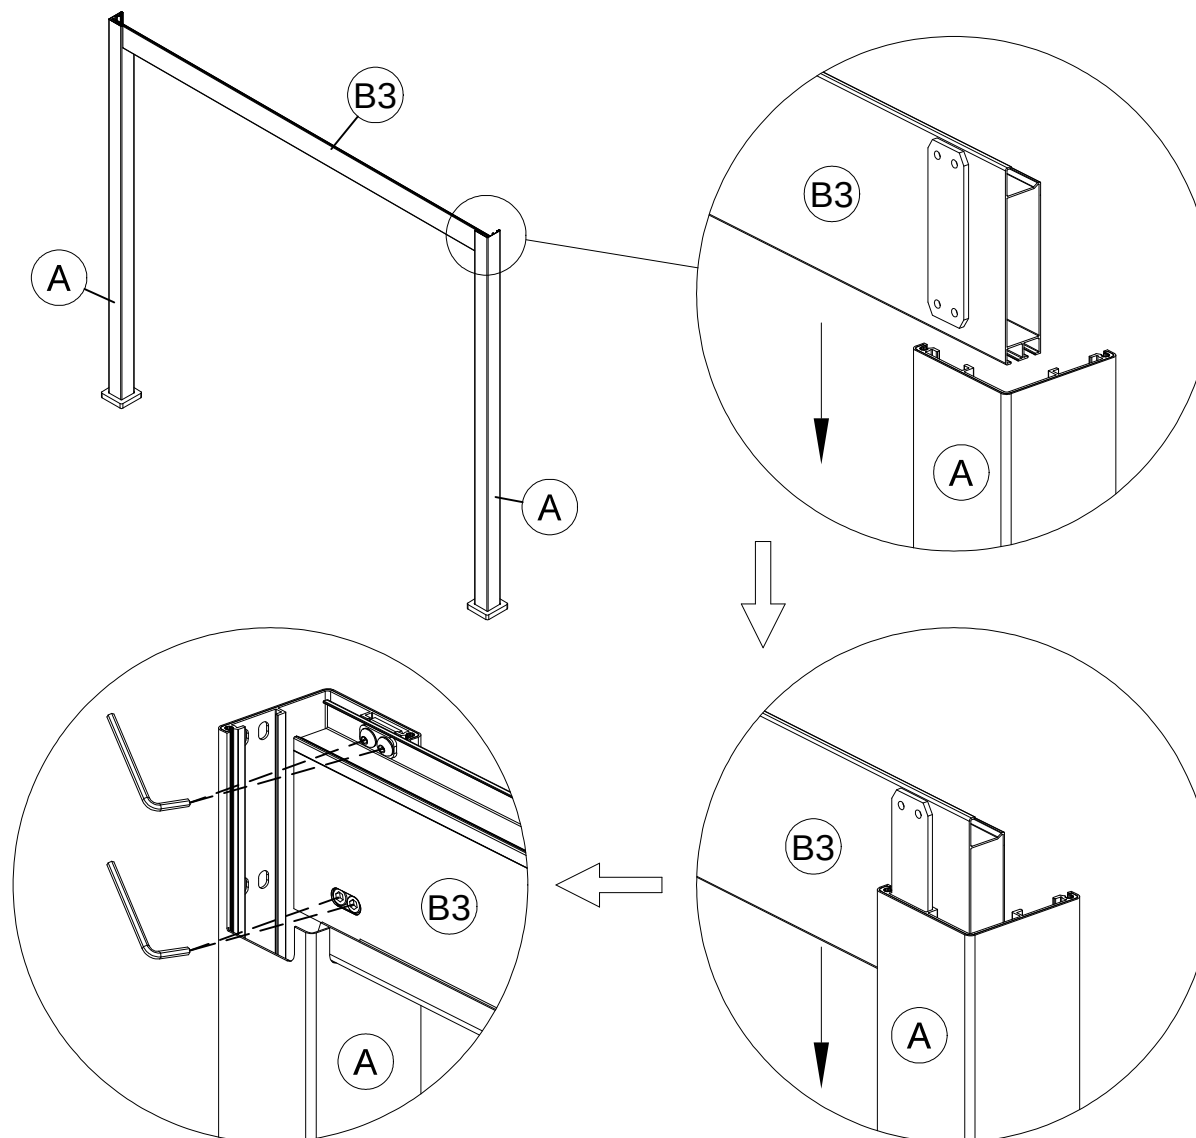


<6>

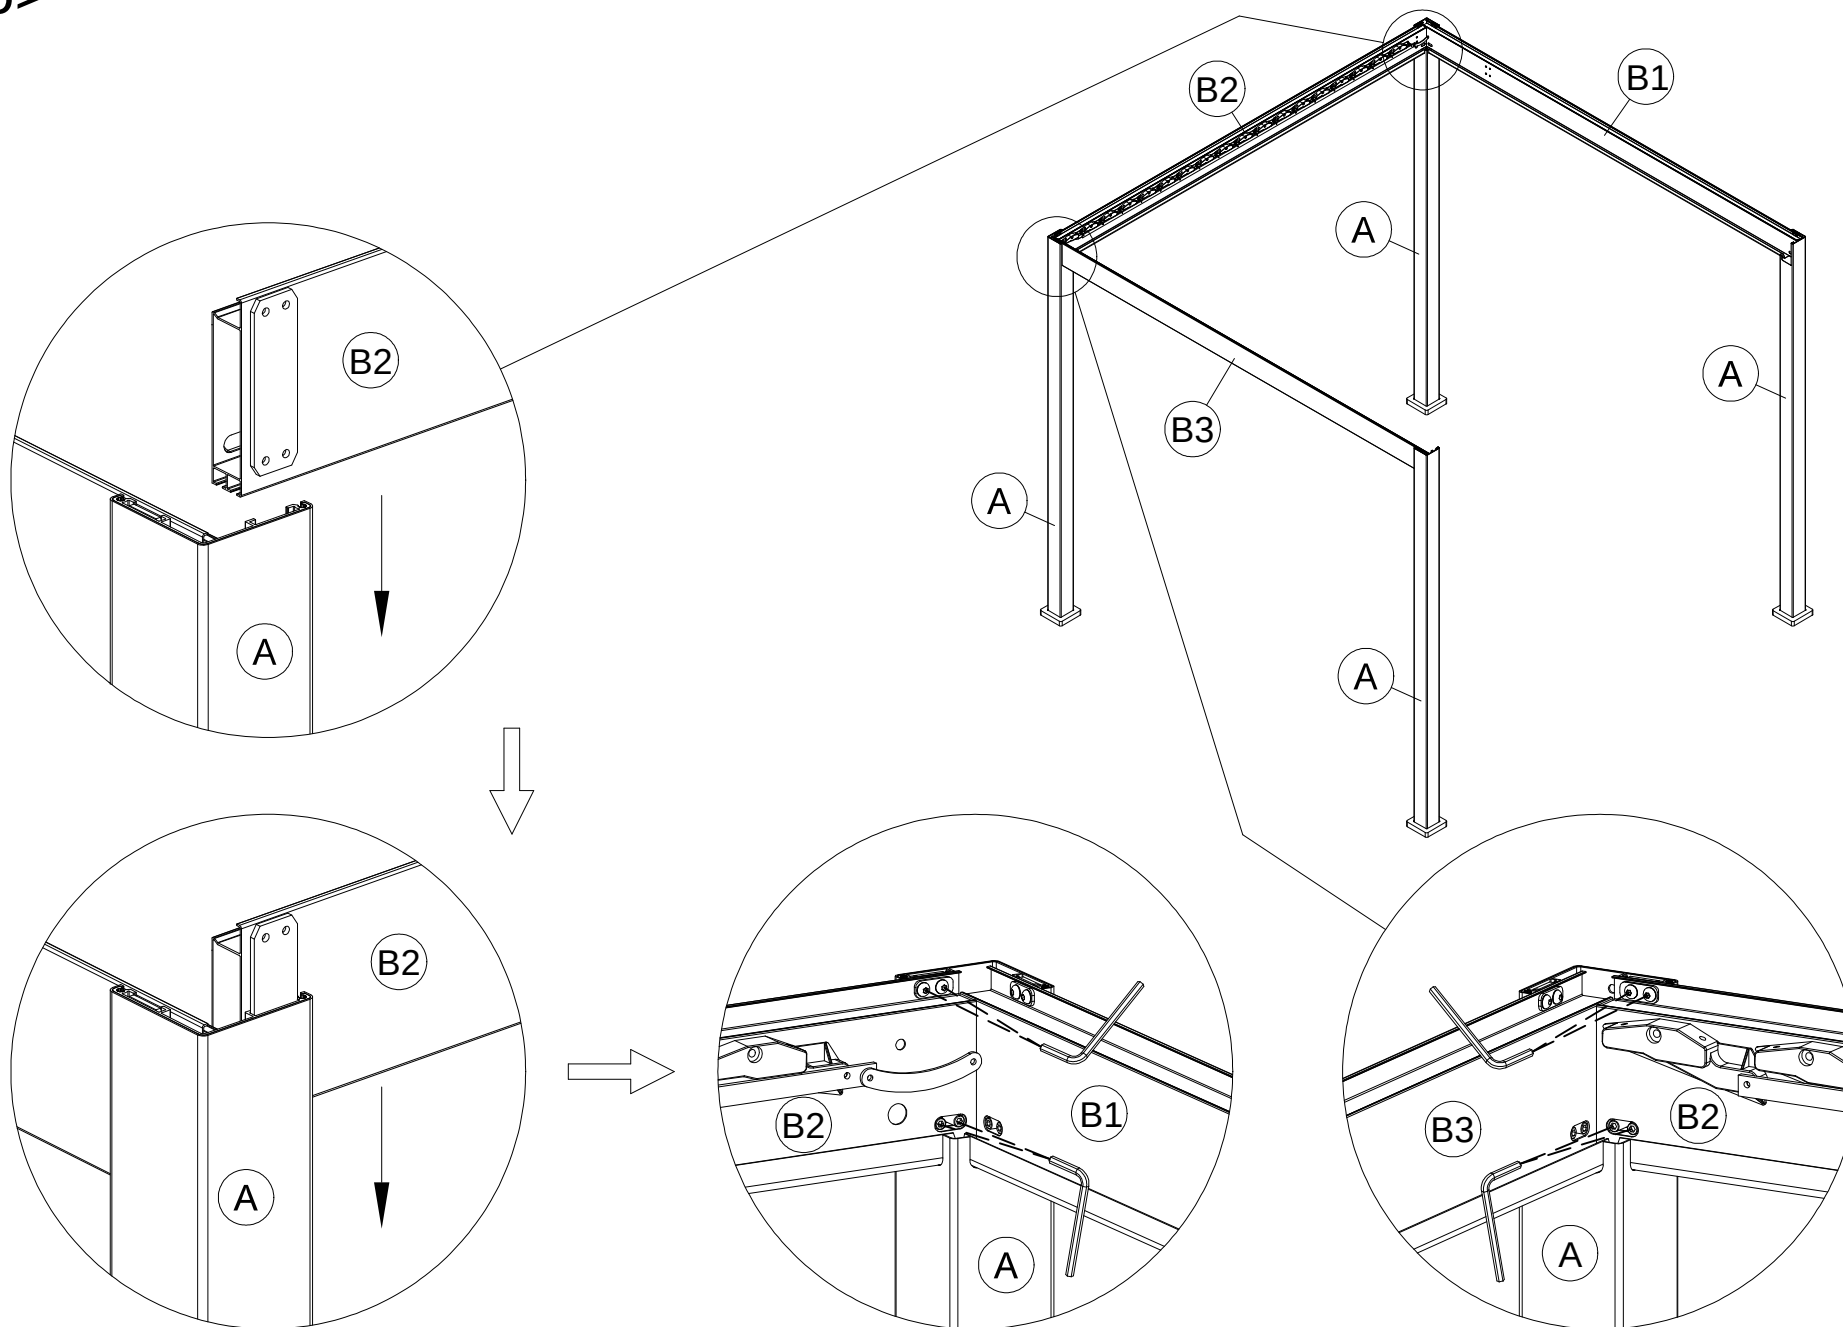




<7>

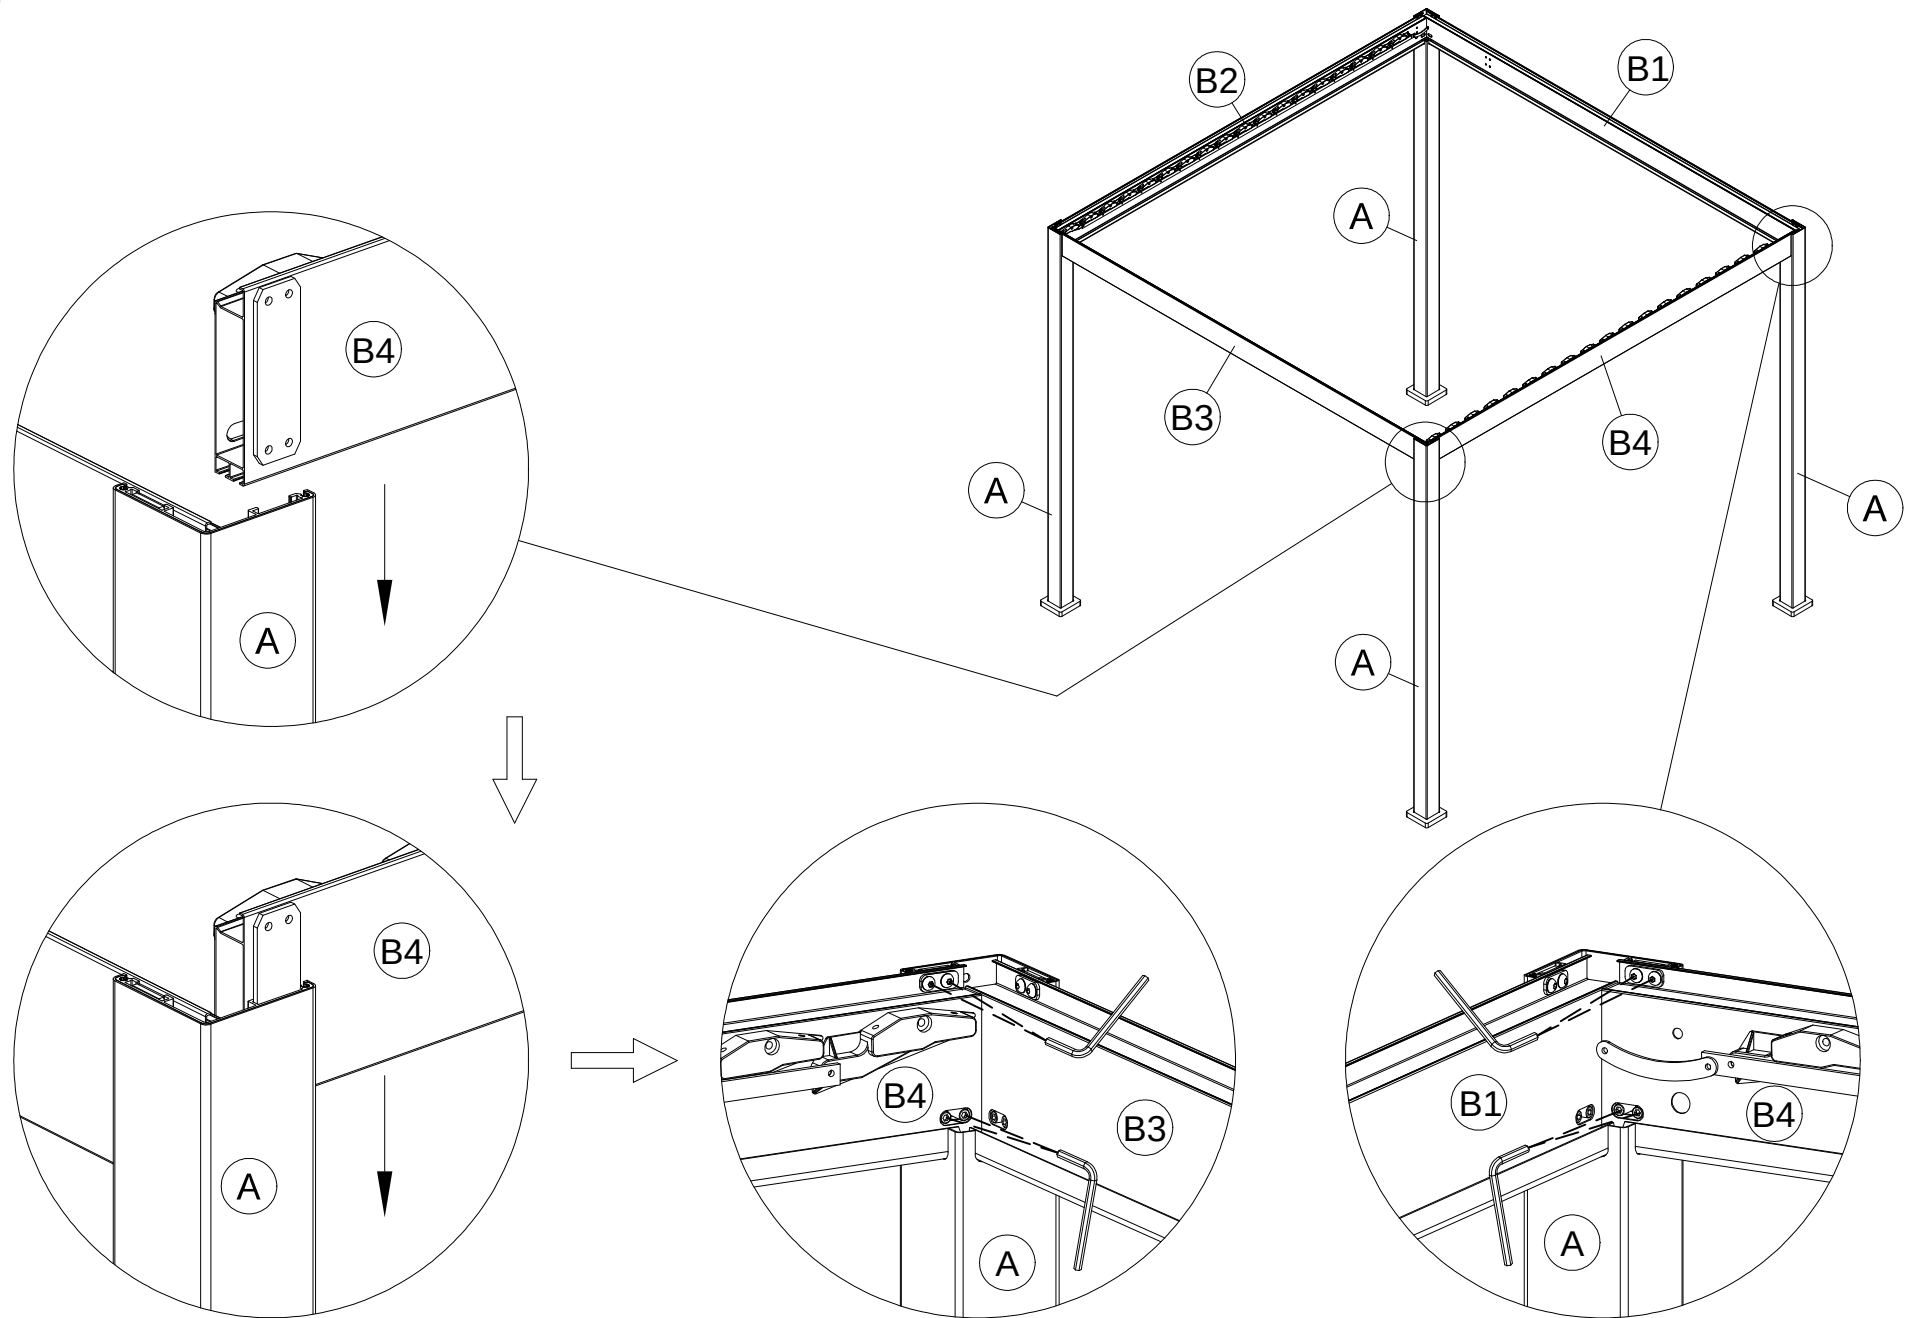

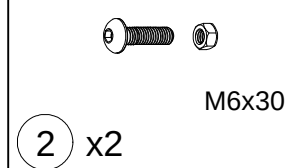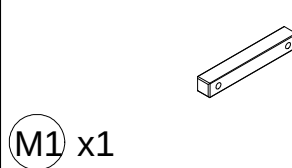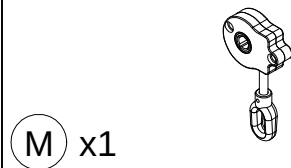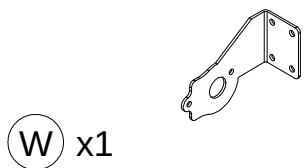


<8>

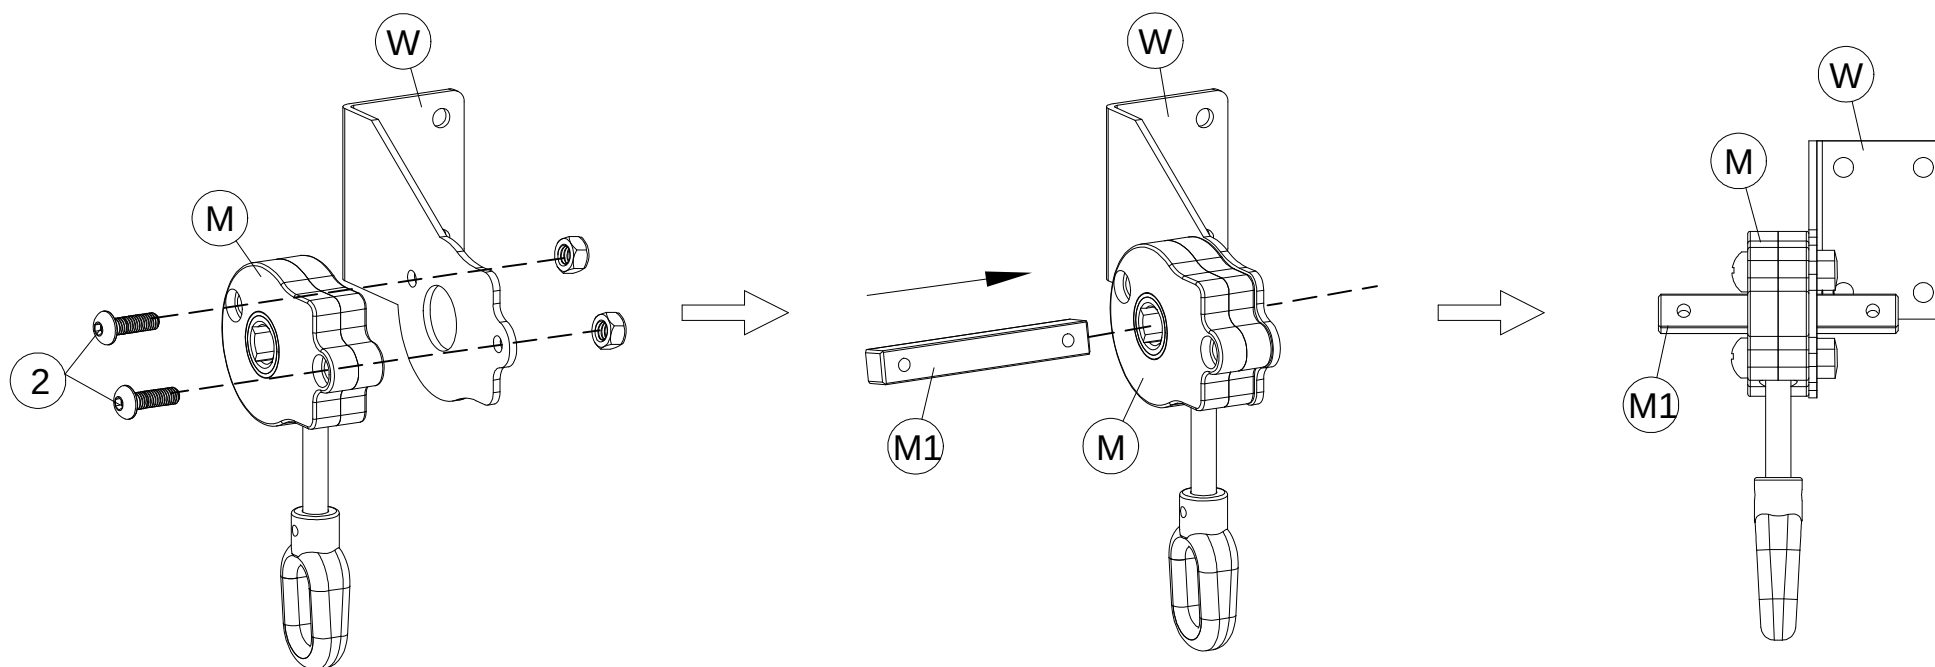

 F1 x1	 F x1	 V1 x1	 V2 x1	 3 x2 M5x10
---	--	---	---	--

<9>

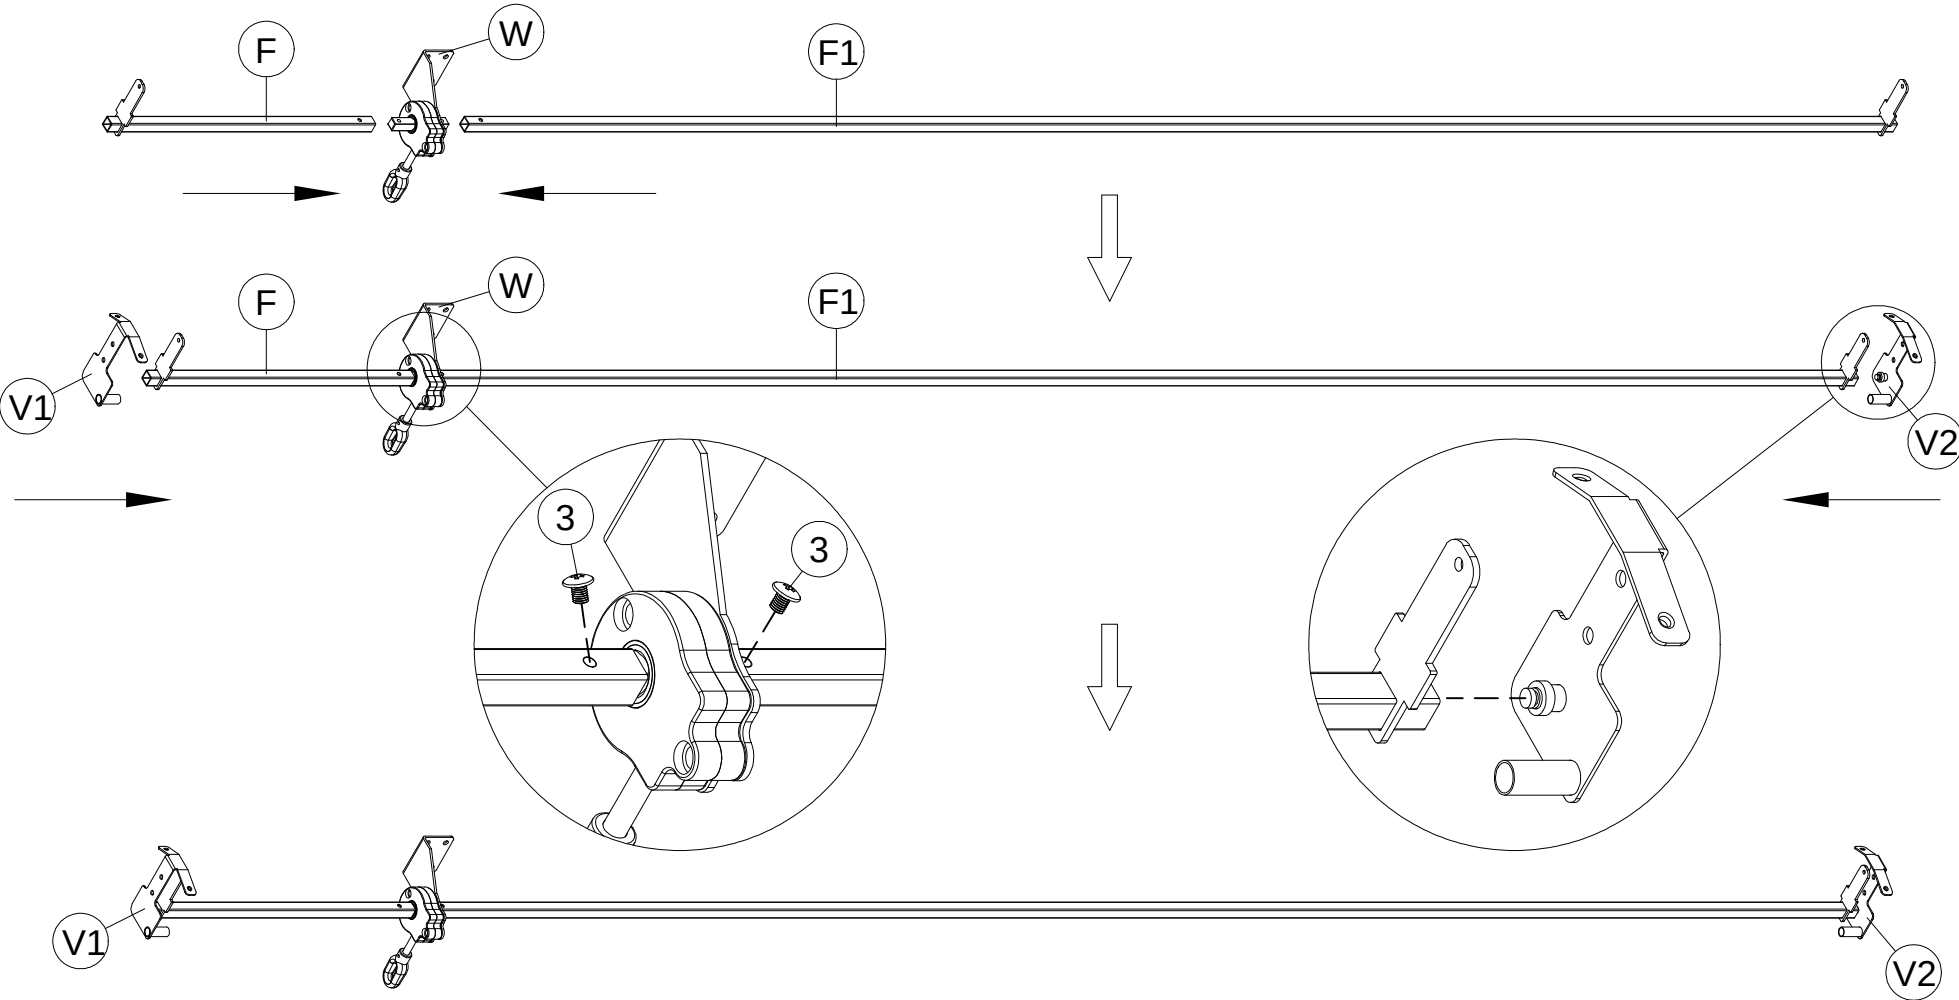




M6x15

1 x8

<10>

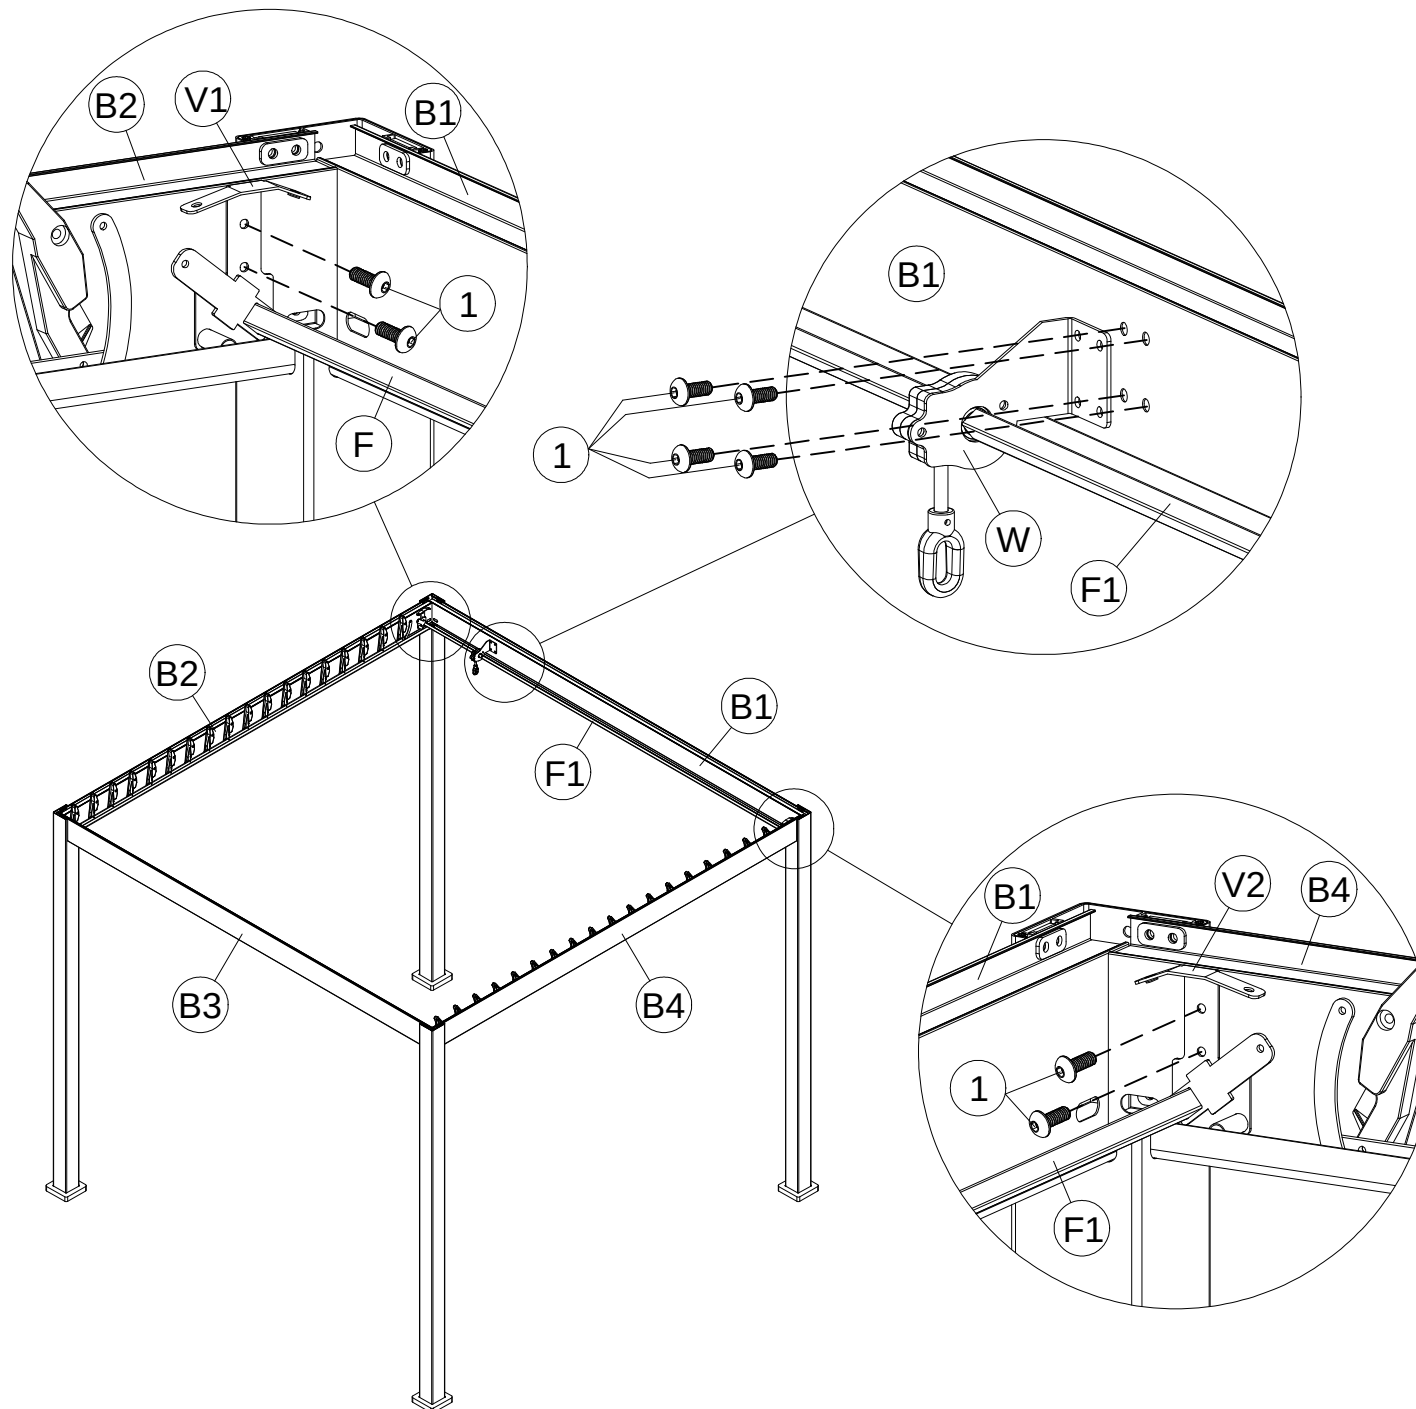




M5x15

5 x2


<11>

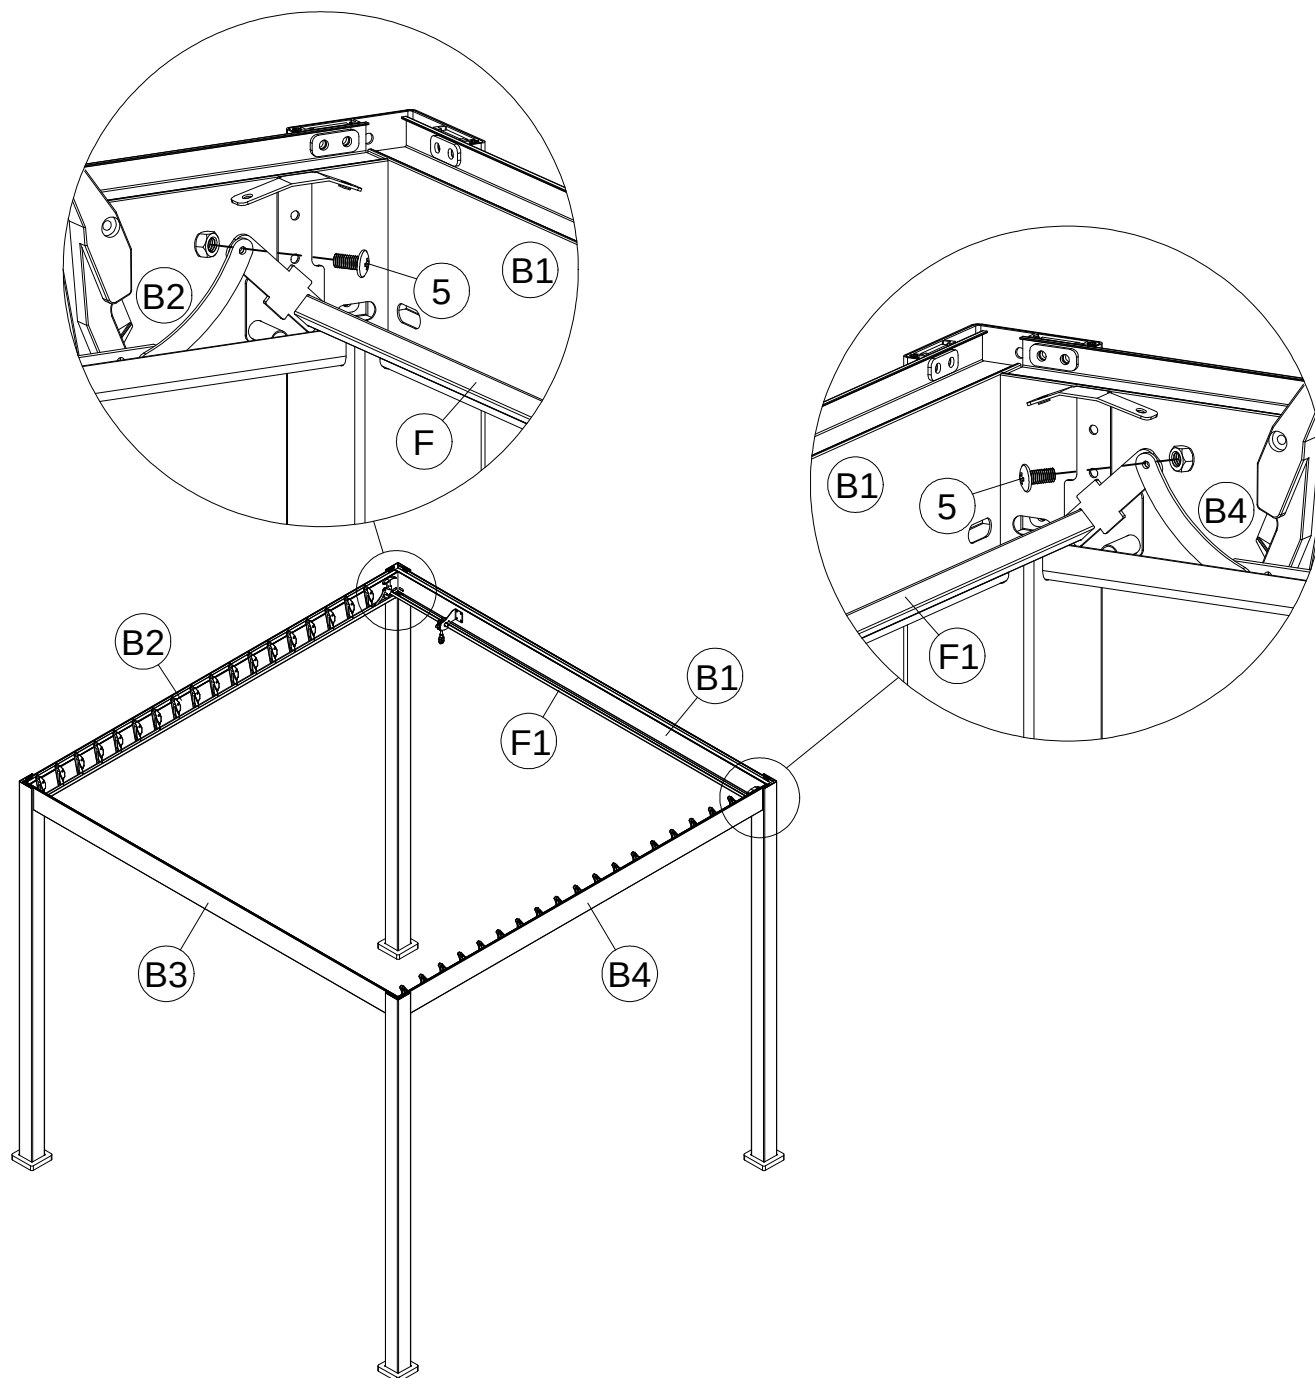







L x1

<12>

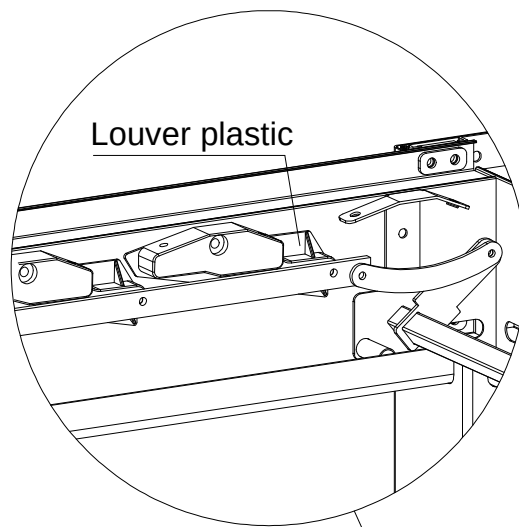

Tips: Twirl the " L " to make the louver plastic flat.

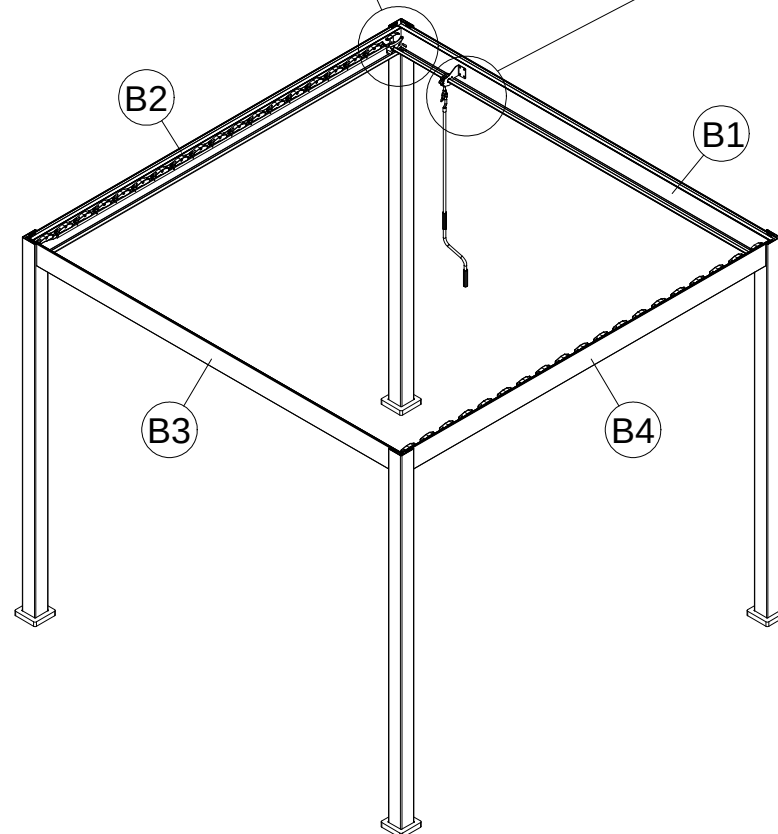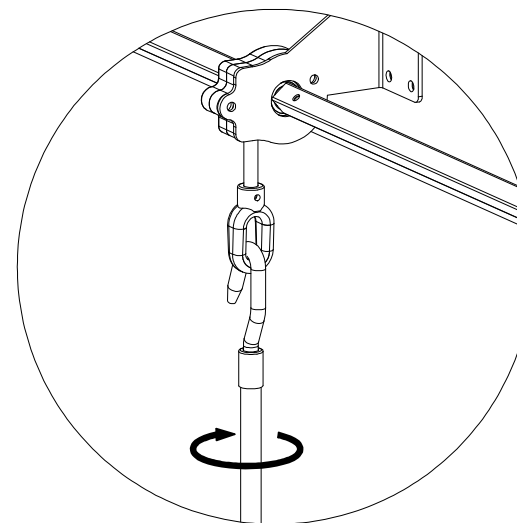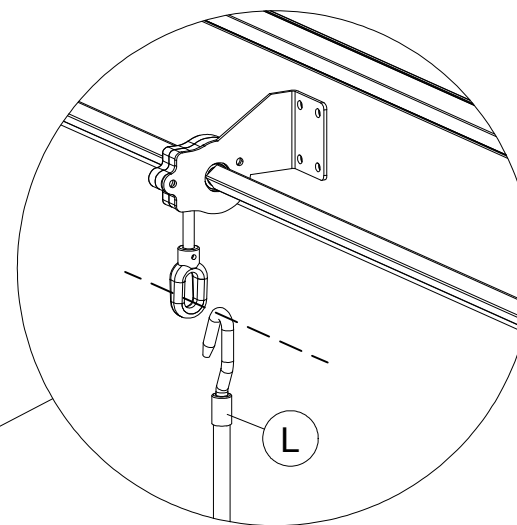




M5x10

Q x19


3 x76

<13>

Tips: Louver "Q" assemble
order from B3 to B1

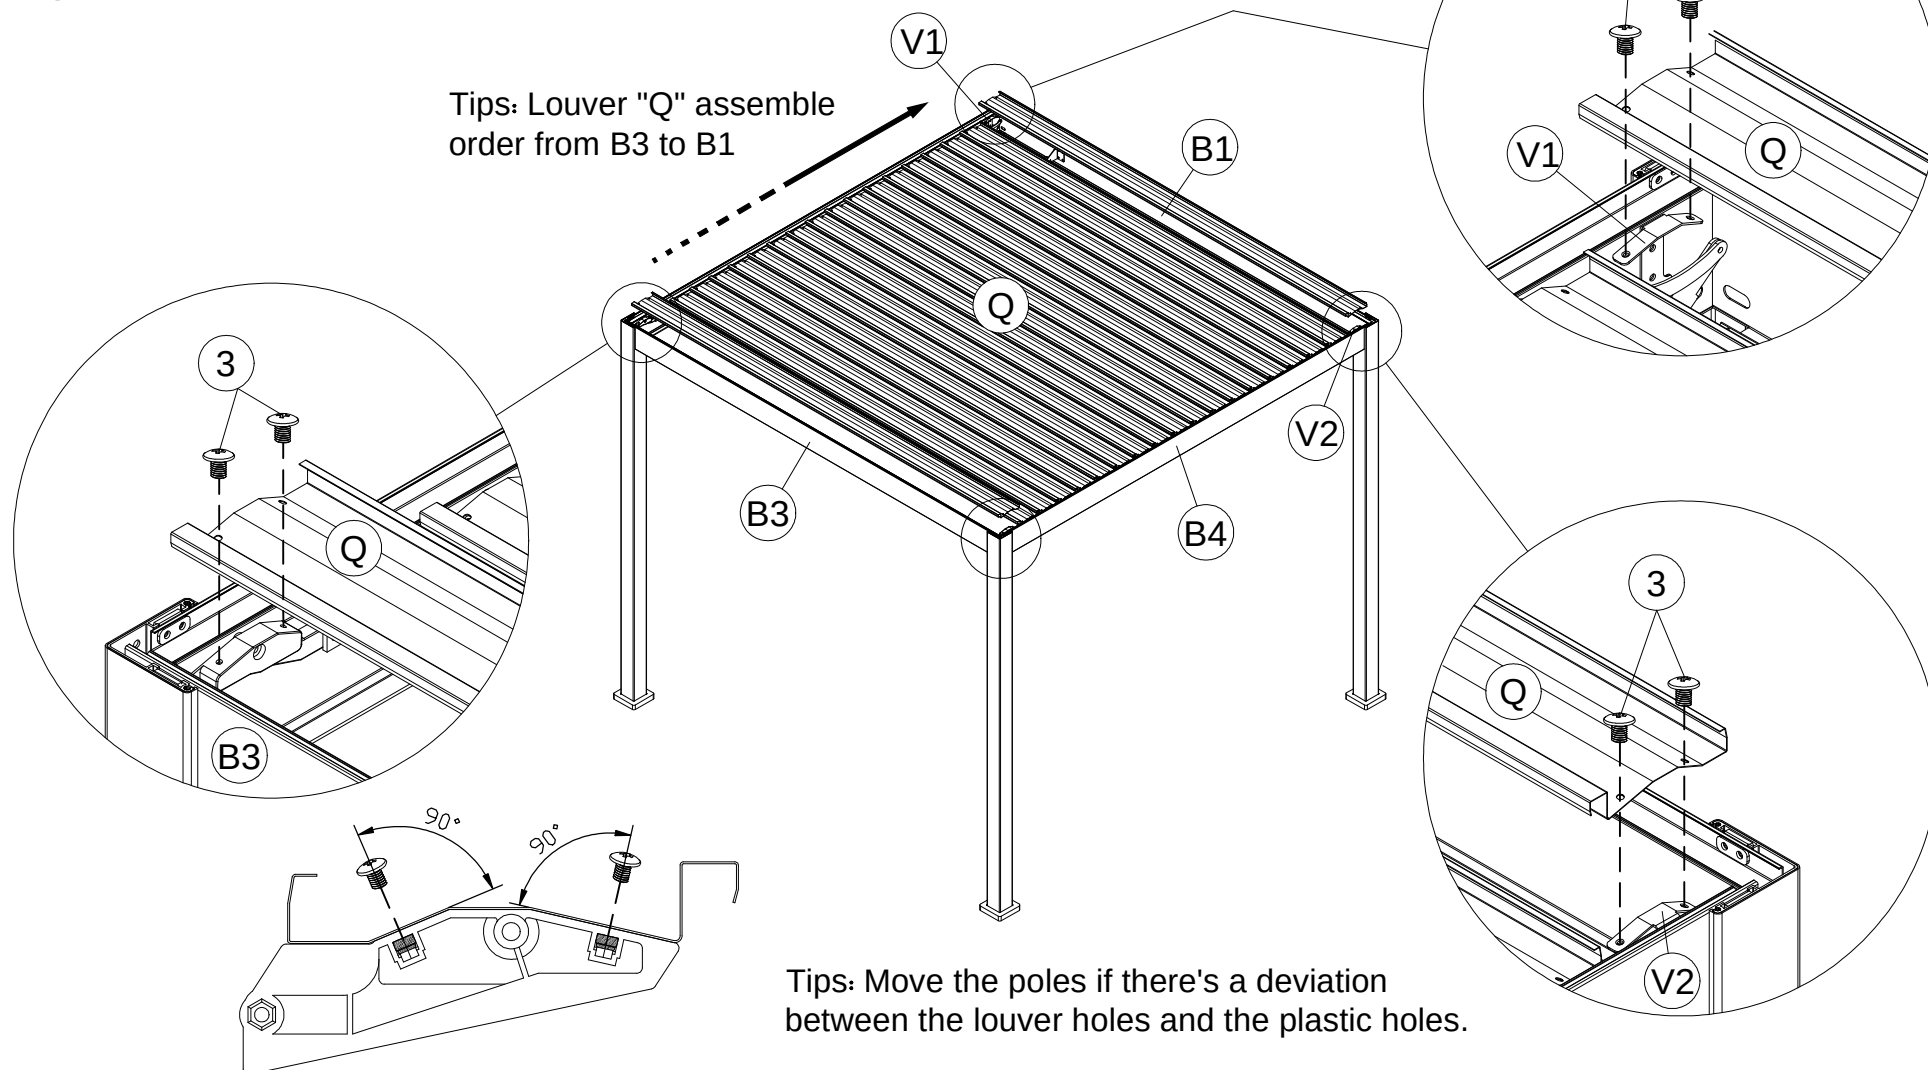

Tips: Move the poles if there's a deviation
between the louver holes and the plastic holes.

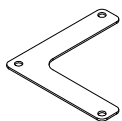


J2 x4



ST5.5x16

4 x8


<14>

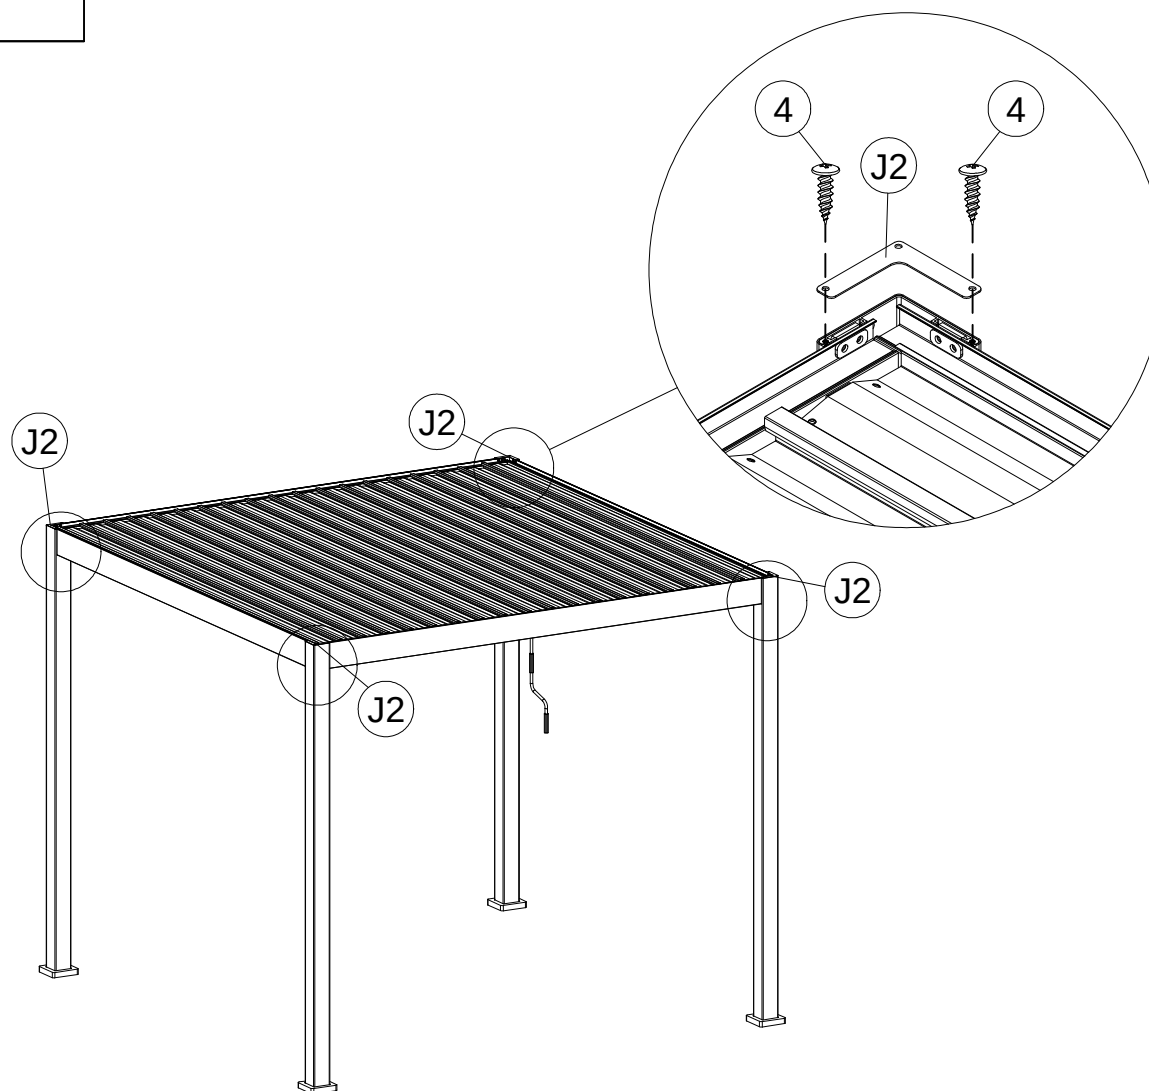






U x96



U1 x8





<15>

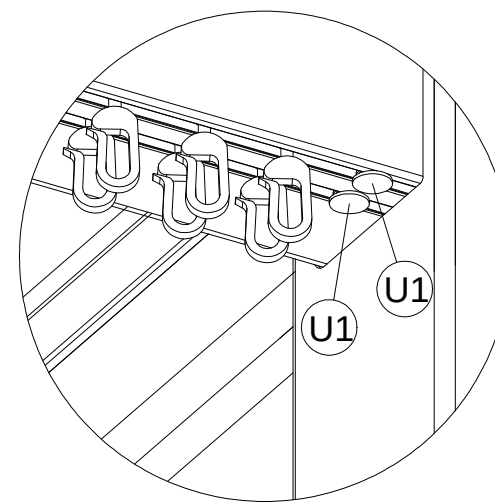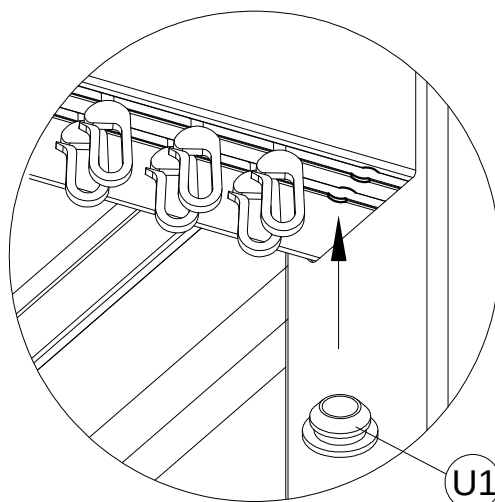
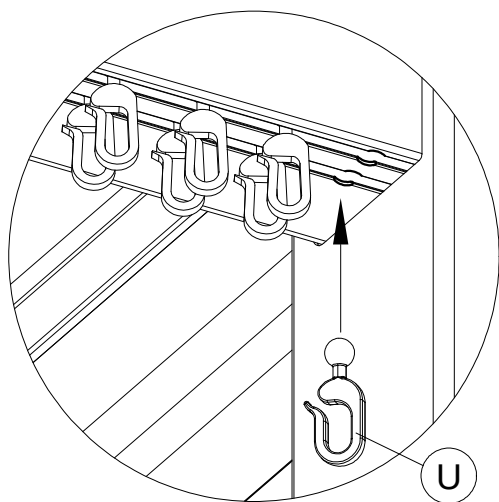
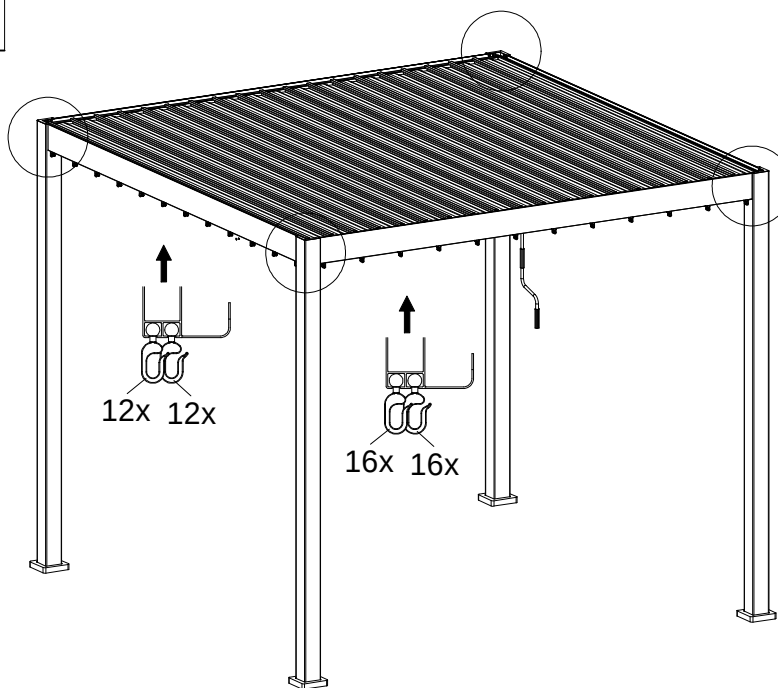



T x4

<16>

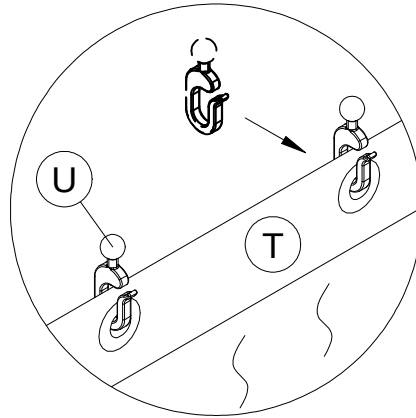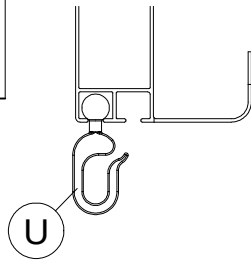



Tips: Before hanging the curtain, make sure that the strap is aligned with the column. If it doesn't fit, hang it on the adjacent column.

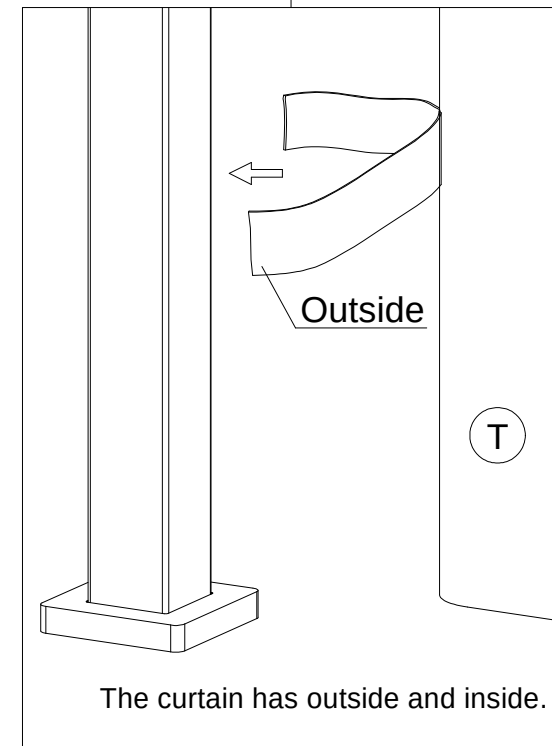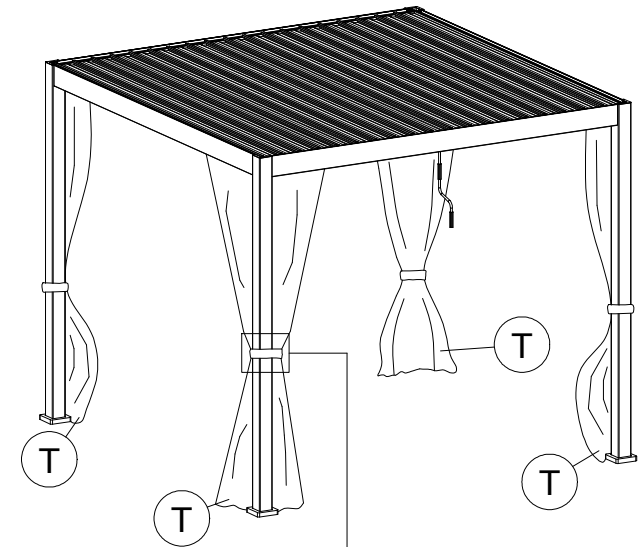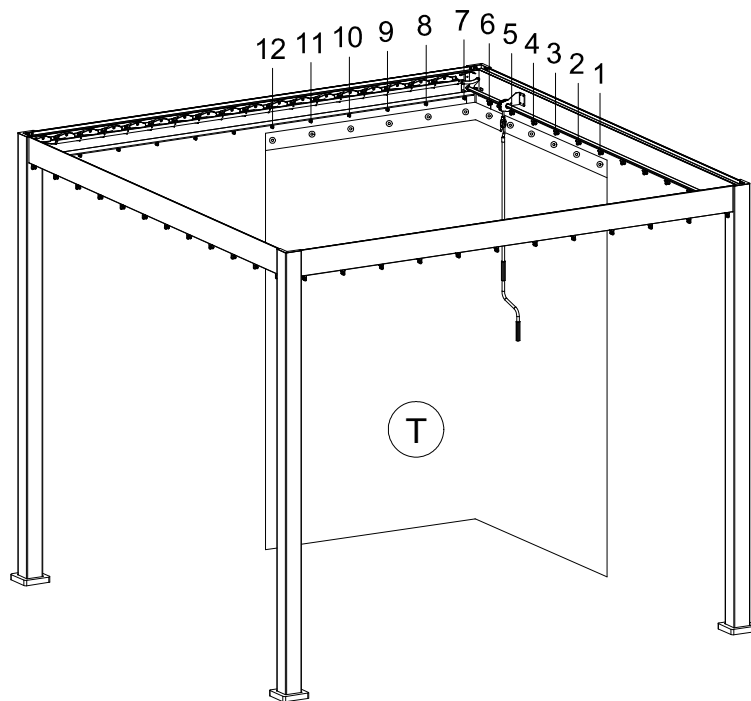

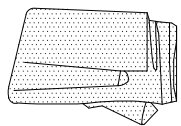

T1 x4

<17>

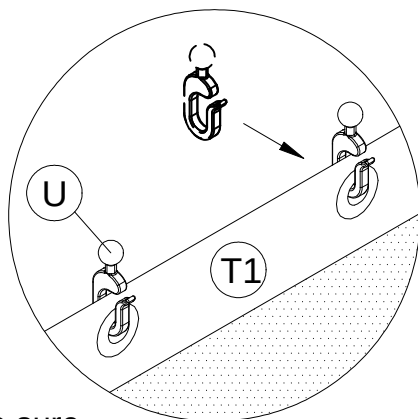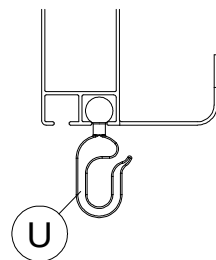

Tips: Before hanging the netting, make sure that the bottom strap is aligned with the column. If it doesn't fit, hang it on the adjacent column.

